


## Test

### Diode

NOTE: The diodes are designed to pass current in one direction and block current in opposite direction. Most ohmmeters, unless equipped with a diode tester, should not be used to test diodes.


Check for continuity in both directions between A and B terminals. There should be continuity in only one direction.

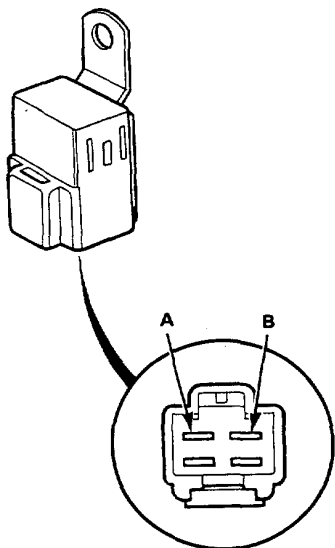

## Refrigerant Can Attachment



1. Loosen the opener.  
NOTE: Check for a rubber packing on the can-joint.

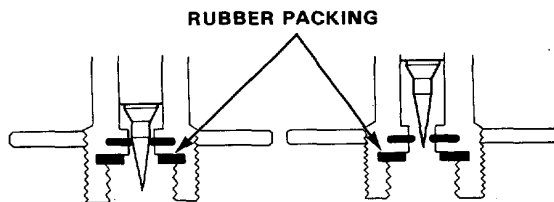

2. Attach a refrigerant can to a can-joint.  
NOTE: If attaching three cans to a four can, can-joint, attach an empty can to the fourth joint.

