

# Carpet/Door Sill Moldings

## Replacement

### Aero Deck (KG, KE):





SRS wire harnesses are routed near the carpet.

#### CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

1. Remove:
  - Front seats
  - Rear seat cushion
  - Consoles
  - Open cover
  - Front seat belt lower anchors
  - Center pillar lower trims
  - Kick panels and door sill moldings
2. Pry out the clips at the rear edge and under the dashboard.
3. Remove the carpet by sliding it rearward.

SRS Type I

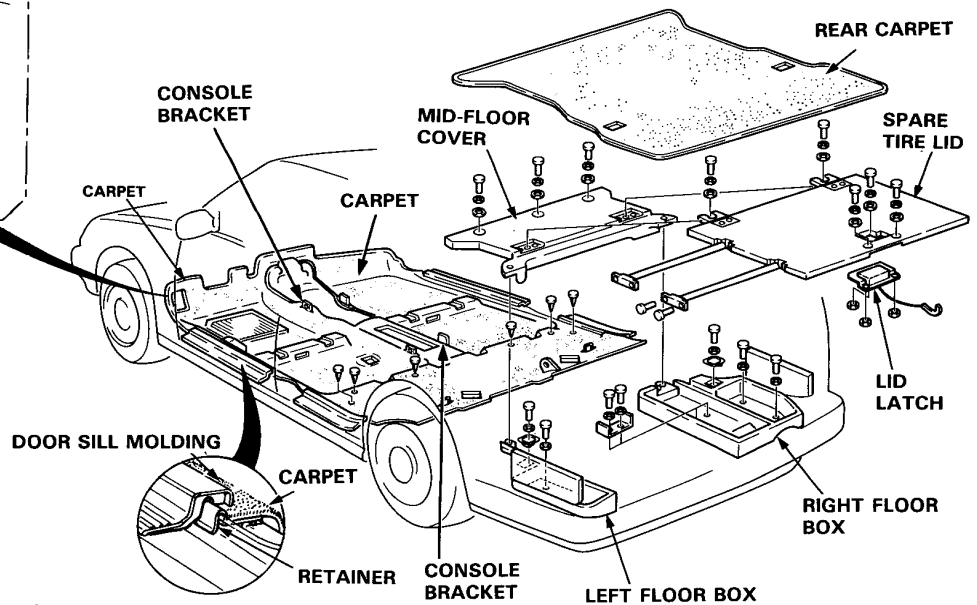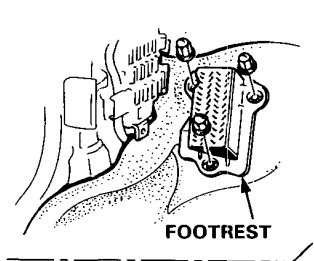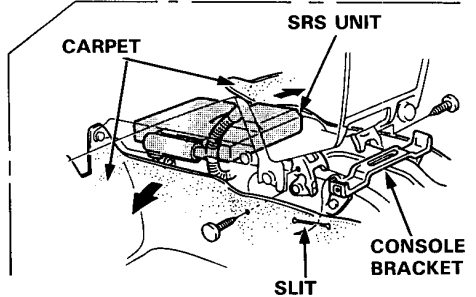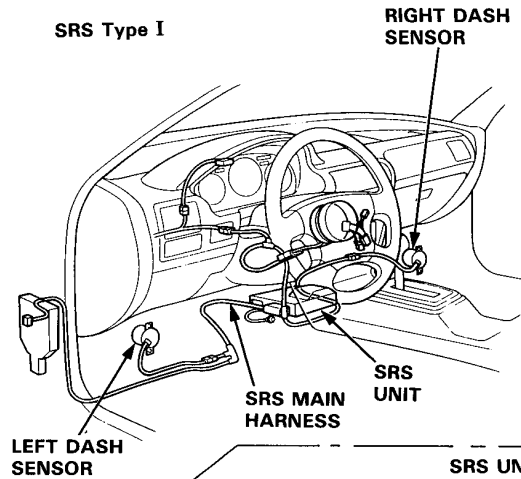

4. Installation is the reverse of the removal procedure.

#### NOTE:

- Take care not to damage, wrinkle or twist the carpet.
- Make sure the seat harnesses are routed correctly.
- Pass the console bracket through the carpet.