
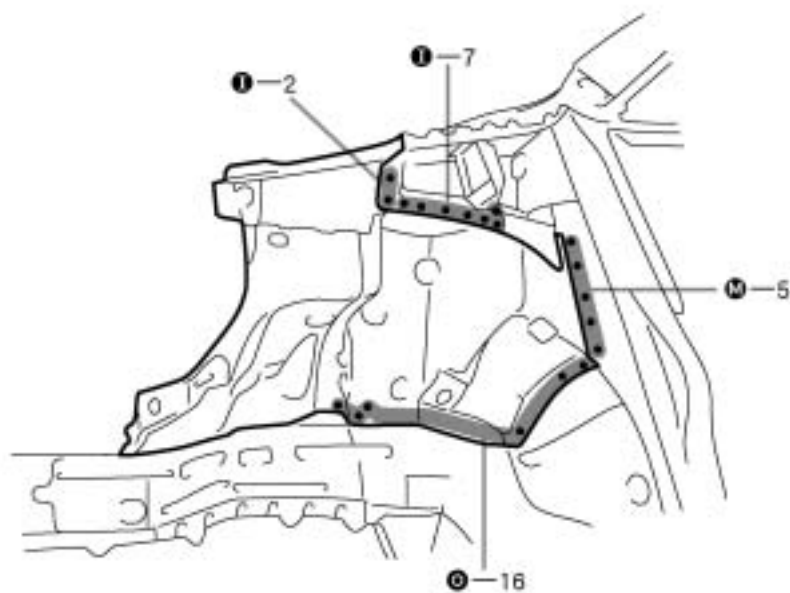


FRONT FENDER APRON (ASSY) REPLACEMENT

1. REMOVE RADIATOR UPPER SUPPORT (See page BP-1)
2. REMOVE COWL TOP SIDE PANEL (See page BP-18)
3. REMOVE FRONT FENDER APRON

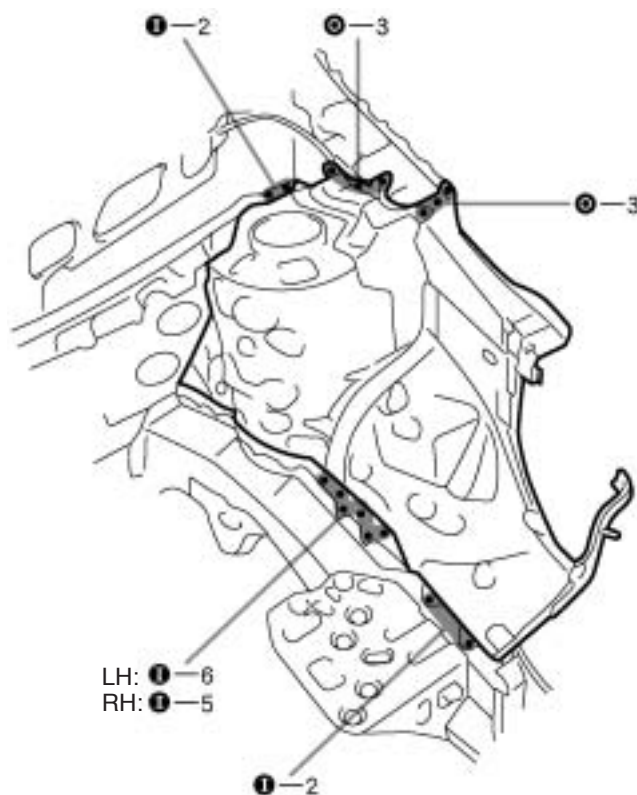

4. INSTALL FRONT FENDER APRON


HINT:

Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

Make sure each measurement is correct, as this parts affects the front wheel alignment.

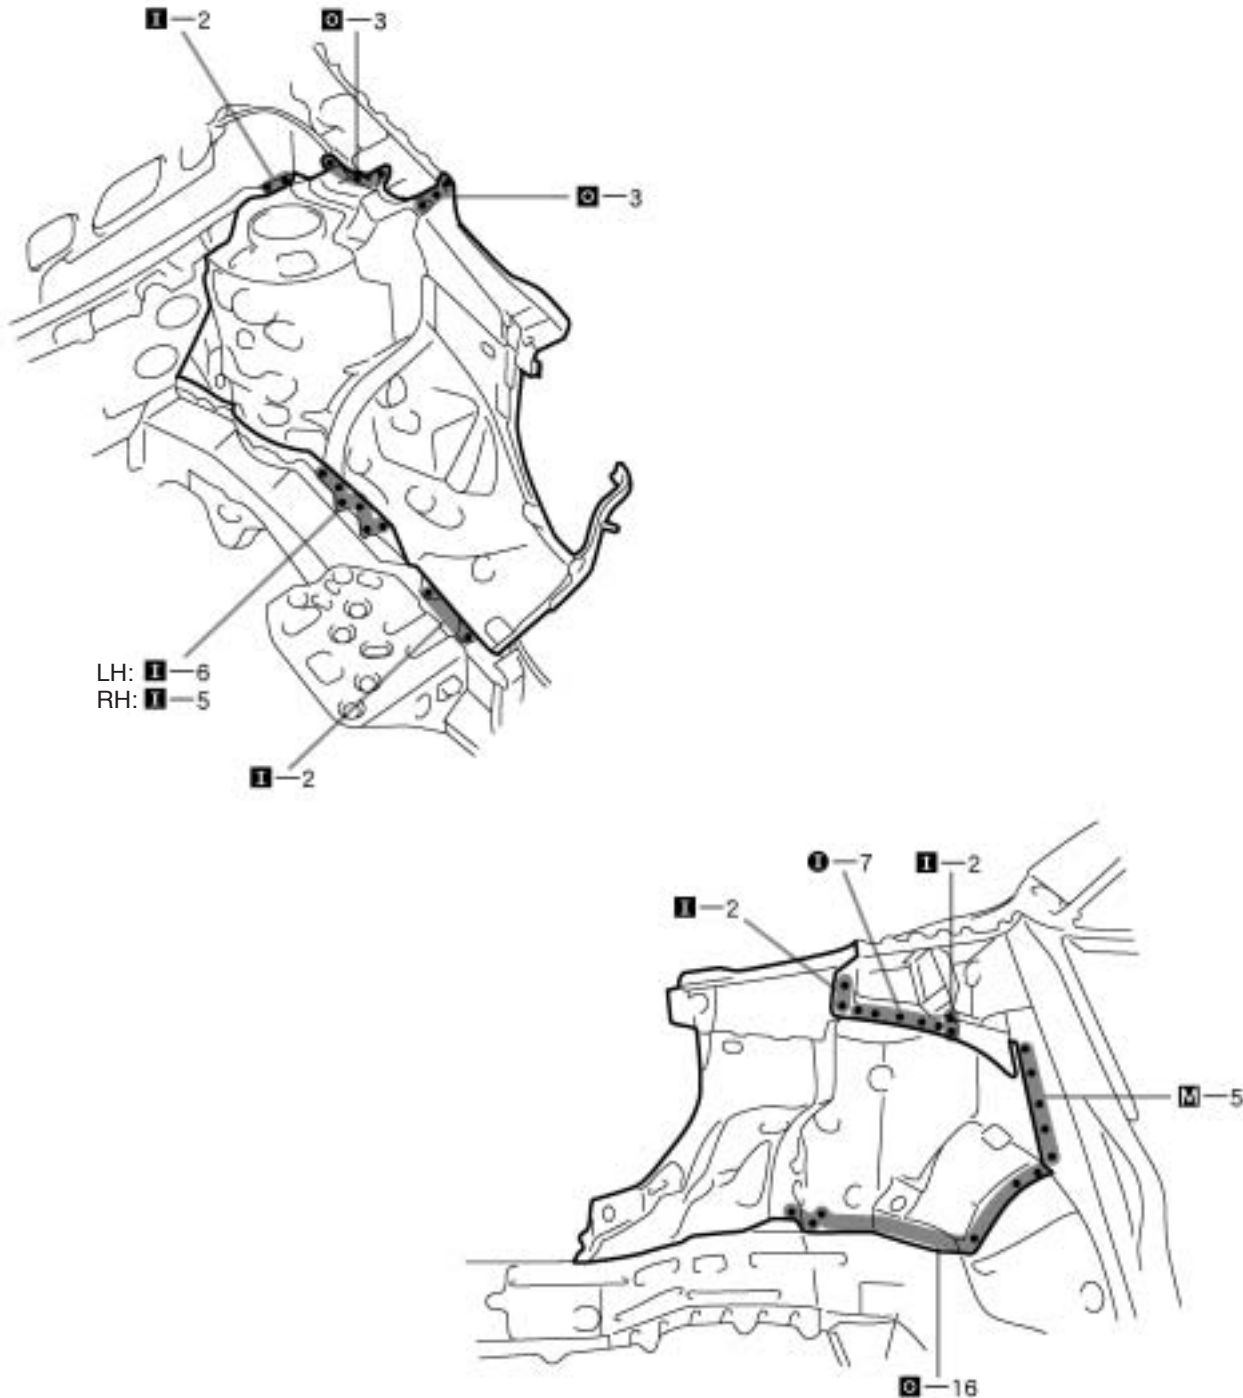

-
5. MEASURING THE ENGINE COMPARTMENT DIMENSIONS ([See page BP-94](#))
 6. MEASURING THE UNDER BODY DIMENSIONS ([See page BP-94](#))
 7. INSTALL COWL TOP SIDE PANEL ([See page BP-18](#))
 8. INSTALL RADIATOR UPPER SUPPORT ([See page BP-1](#))
 9. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
 10. APPLYING SEALER TO THE INSIDE OF THE VEHICLE ([See page PC-1](#))
 11. APPLYING UNDER COATING ([See page PC-7](#))
 12. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.