

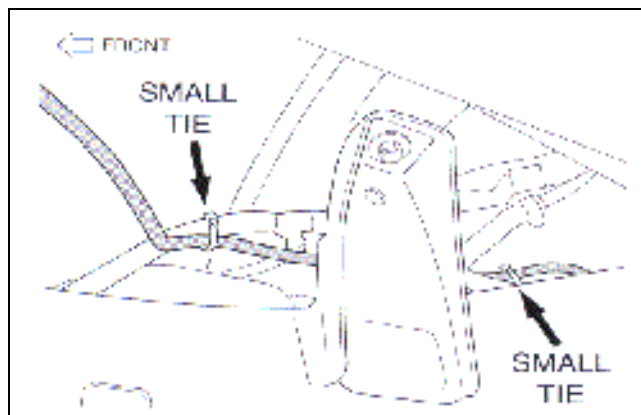


VIII. INSTALLATION OF BED HARNESS

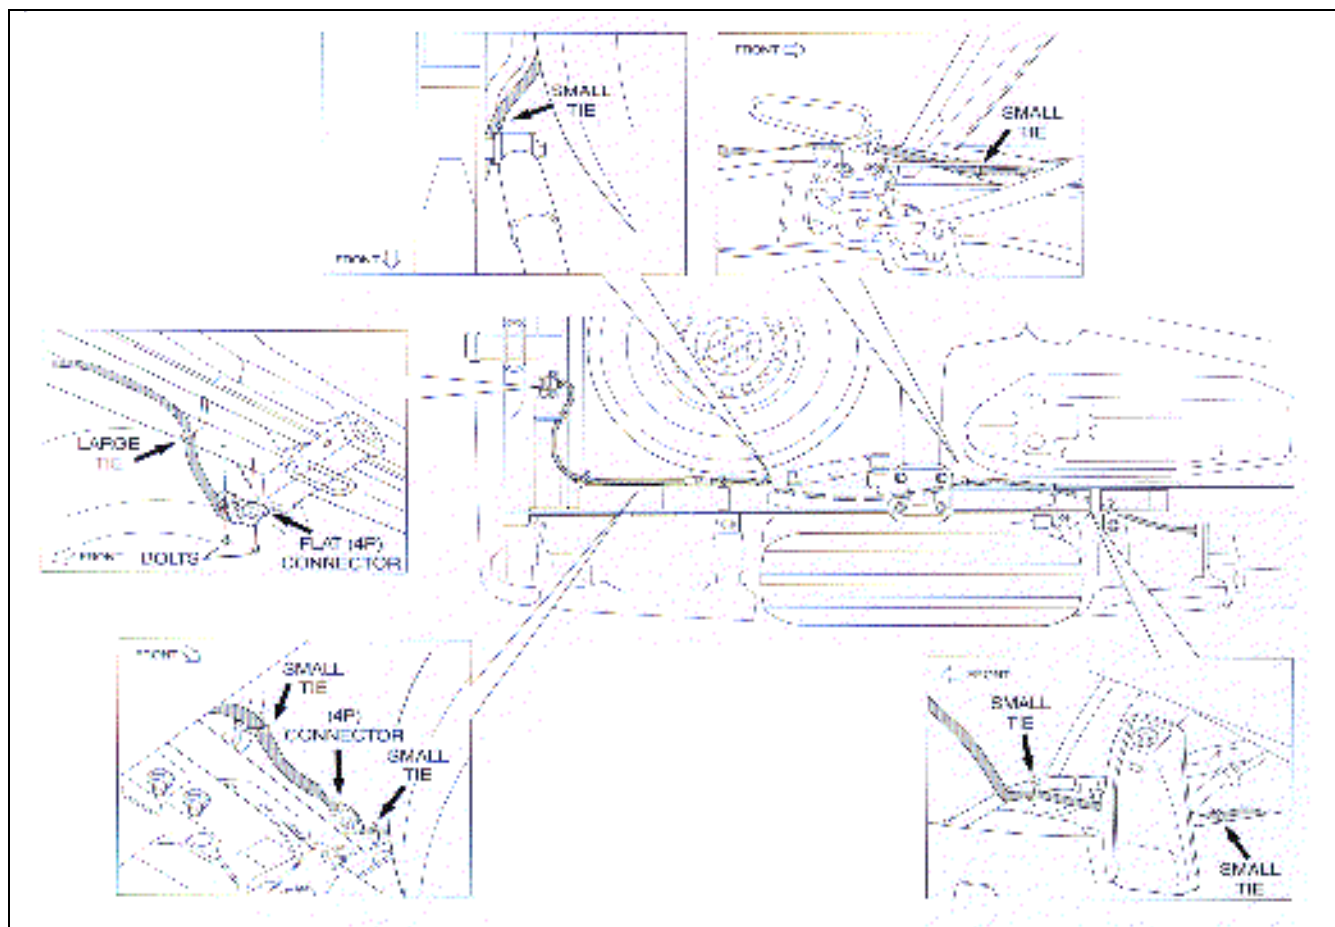


1. INSTALL THE BED WIRE HARNESS


- Working from the cab rearward route the wire harness along the left frame rail.
- Install 2 tie-wraps near the forward left bed mount in the area shown.

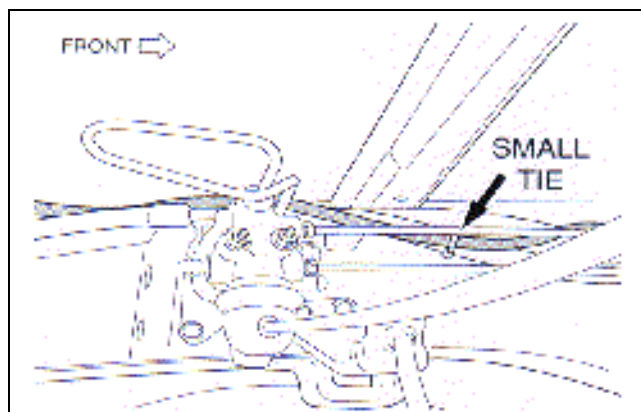


- Install a tie-wrap near the brake load-regulating valve.

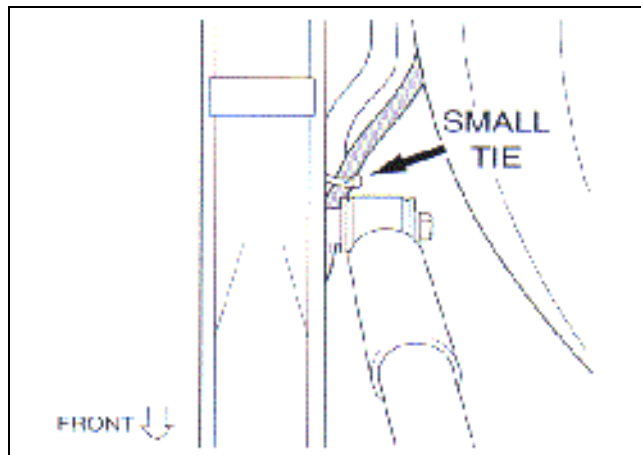

- (d) Install a tie-wrap near the left rear shock as shown.

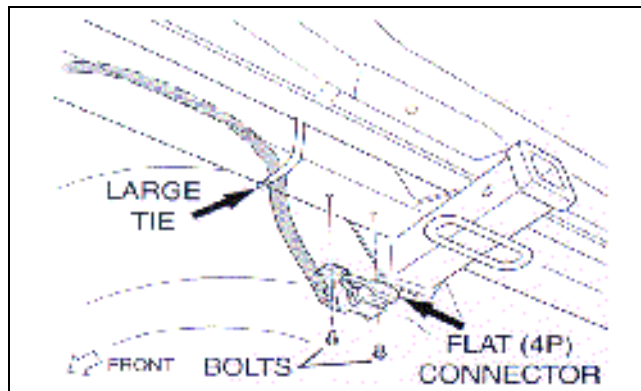

- (e) Mount the flat four connector to the tow hitch.
(f) Attach the flat four harness to the hitch with a tie-wrap.

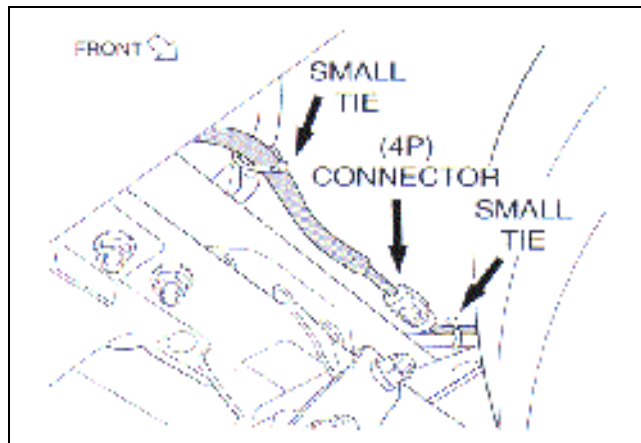

- (g) Route the flat four harnesses to the converter box harness.
(h) Connect the flat four harnesses to the converter box harness and secure to vehicle frame near left rear bumper mount.

1. INSPECT FUSES

Inspect the following fuses and replace as necessary:

- STOP
- TAIL
- HAZ-TRN

2. RECONNECT THE BATTERY

- (a) Reconnect the negative (-) battery terminal.
(b) Reset radio station presets.
(c) Set clock to current time.
(d) Perform the function check as outlined in **Section IX**.