

INSTALLATION


HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

INSTALL REAR SEAT

- (a) Hook the rear seat to the body panel.
- (b) Install the 4 bolts.

Torque: 19 N·m (195 kgf-cm, 14 ft-lbf)

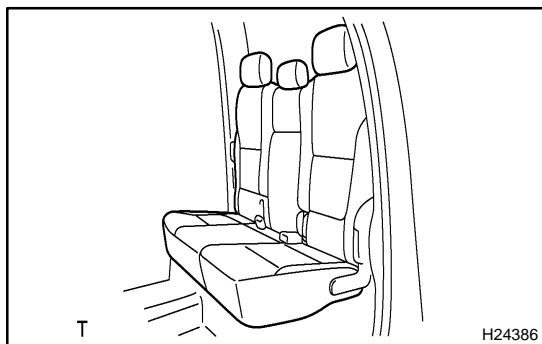

- (c) Release the rear seat lock and swing down the seat cushions.

HINT:

Before swinging down the seat cushion, store the inner belts in the rear seat.