

# Test


## A/C Switch

(Type for with A/C only)

1. Disconnect the (button type: 14-P, lever type: 10-P) connector from the heater control switch.
2. Check for continuity between the terminals of the heater control switch according to the table below.

(Button type)

Terminal Position	①	②	③	④
OFF			○—○	
ON	○—○		○—○	

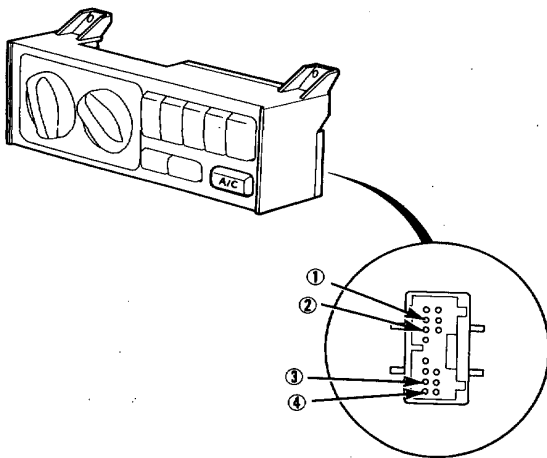

(Lever type)

Terminal Position	①	②	③	④
OFF	○—○	○—○		
ON	○—○	○—○	○—○	○—○

