


# Compressor


## Clutch Overhaul

1. Remove the center bolt.

SPECIAL TOOL  
07LAB-SK70100

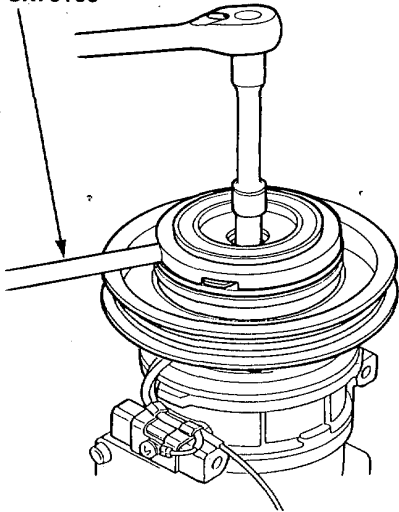

2. Remove the pressure plate and shim(s) taking care not to lose the shims.

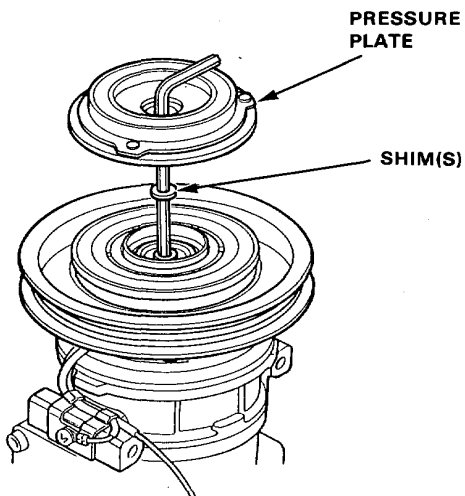

3. Use circlip pliers to remove the snap ring B, then remove the pulley.

SNAP RING B

