


Power Unit

Accumulator Disposal

⚠ WARNING The accumulator contains high pressure nitrogen gas. Do not puncture, expose to the flame, or attempt to disassemble the accumulator or it may explode and severe personal injury may result.

1. Secure the power unit in a vise and remove the accumulator from the power unit.

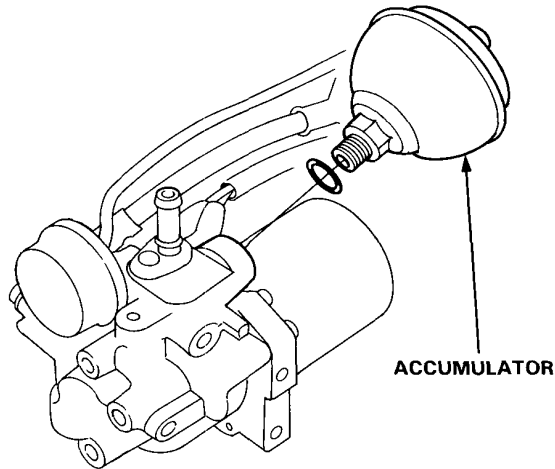

2. Secure the accumulator in a vise so that the relief plug points straight up.
3. Slowly turn the plug 3-1/2 turns and then wait 3 minutes for all pressure to escape.
4. Remove the plug completely and dispose of the accumulator.

