



Carpet


Replacement

SRS wire harnesses are routed near the carpet.

CAUTION:



- All SRS wire harnesses are covered with yellow insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, turn the ignition switch OFF, disconnect the battery negative cable, then disconnect the positive cable, and wait at least three minutes.
- Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.
- Before you disconnect any part of an SRS wire harness, connect the short connectors (RED) to the airbags.
- For additional precautions, refer to page 23-B6 in the SRS sub-section.

NOTE: The illustration shows the KG model. The KE model is symmetrical to the KG model.

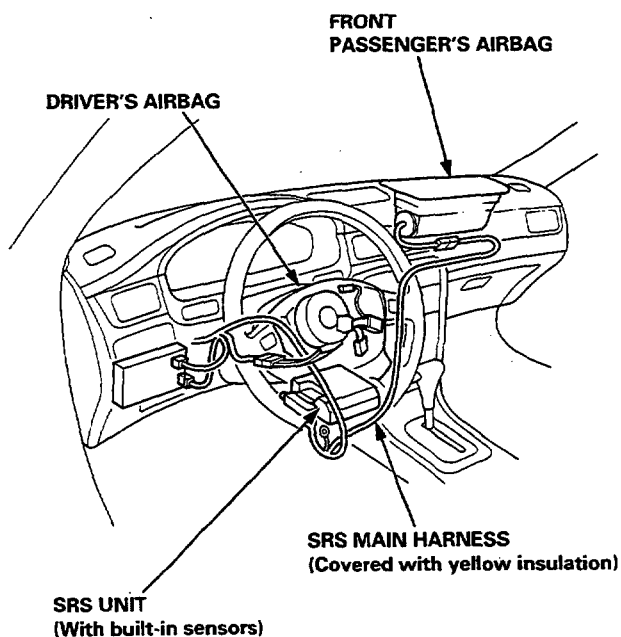

1. Remove:
 - Front seat (see page 20-61)
 - Rear seat cushion (see page 20-66)
 - Front door sill molding (see page 20-55)
 - Rear door sill molding (see page 20-57)
 - Center pillar lower trim (see page 20-56)
 - Front seat belt lower anchor (see page 20-70)
 - Front and rear consoles (see page 20-77)
 - Kick panel (see page 20-55)
 - Opener cover (see page 20-96)
2. Remove the SRS unit covers.
3. Cut areas **A** and **B** in the carpet, then pull it back as shown.

▷: Clip locations, 2

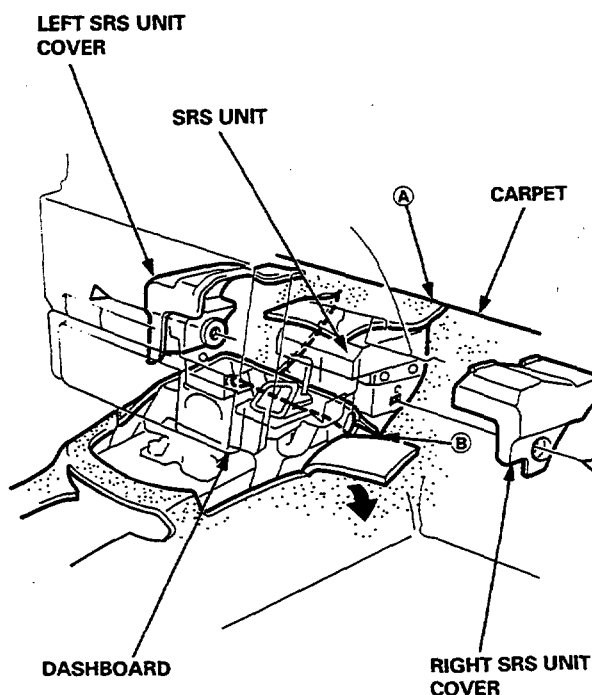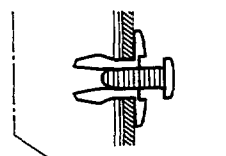


(cont'd)

Carpet

Replacement (cont'd)



4. Remove the footrest.

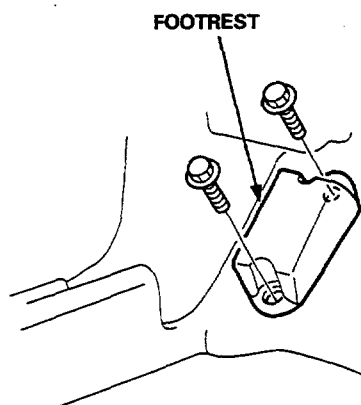

5. Remove the carpet by sliding it rearward.

NOTE: LHD is shown, RHD is symmetrical.


▷: Clip locations, 4

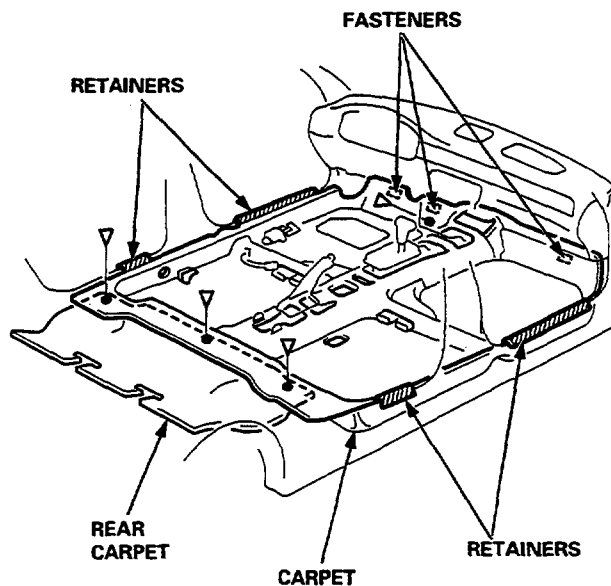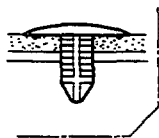


6. Installation is the reverse of the removal procedure.

NOTE:


- Take care not to damage, wrinkle or twist the carpet.
- Reattach the cut areas ① and ② in the carpet (see page 20-95) with a wire tie as shown.

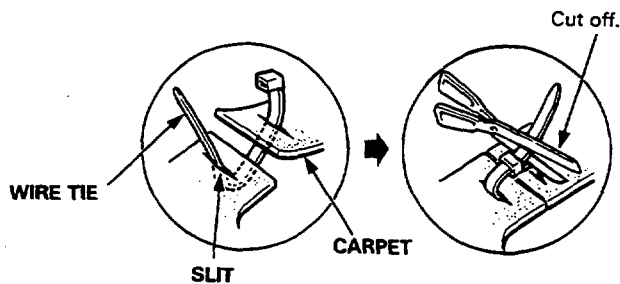

- If necessary, replace any damaged clips.
- Slip the slits in the carpet over the rear console bracket and rear center seat belts.

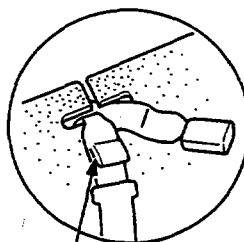

REAR CENTER SEAT BELT

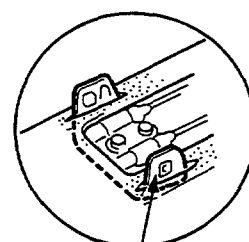

REAR CONSOLE BRACKET