


Stereo Sound System




Component Location Index

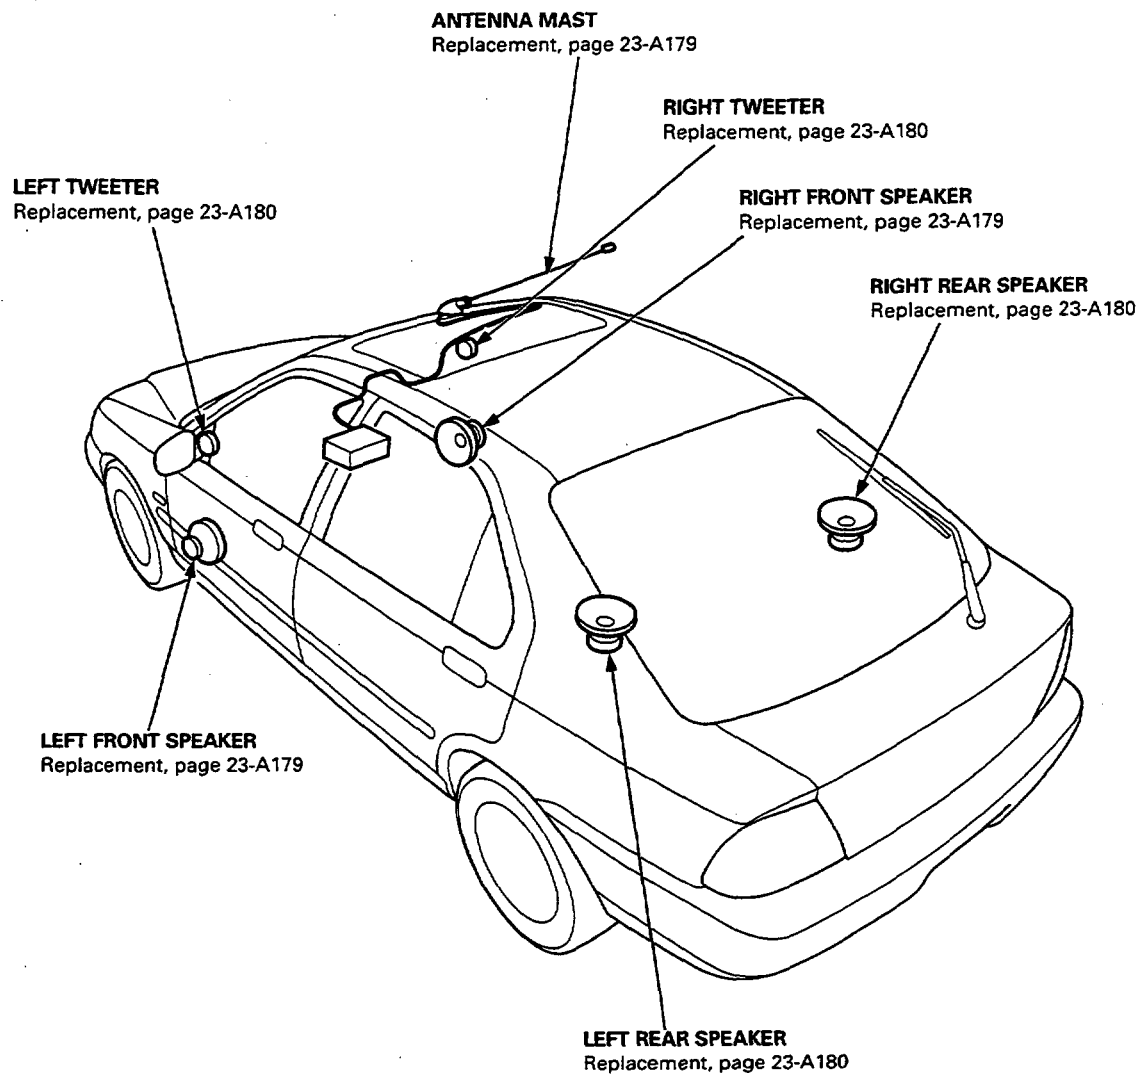

Stereo Sound System


Circuit Diagram (KG model)

NOTE: In case of the KG model, the stereo radio/cassette player is YOP.

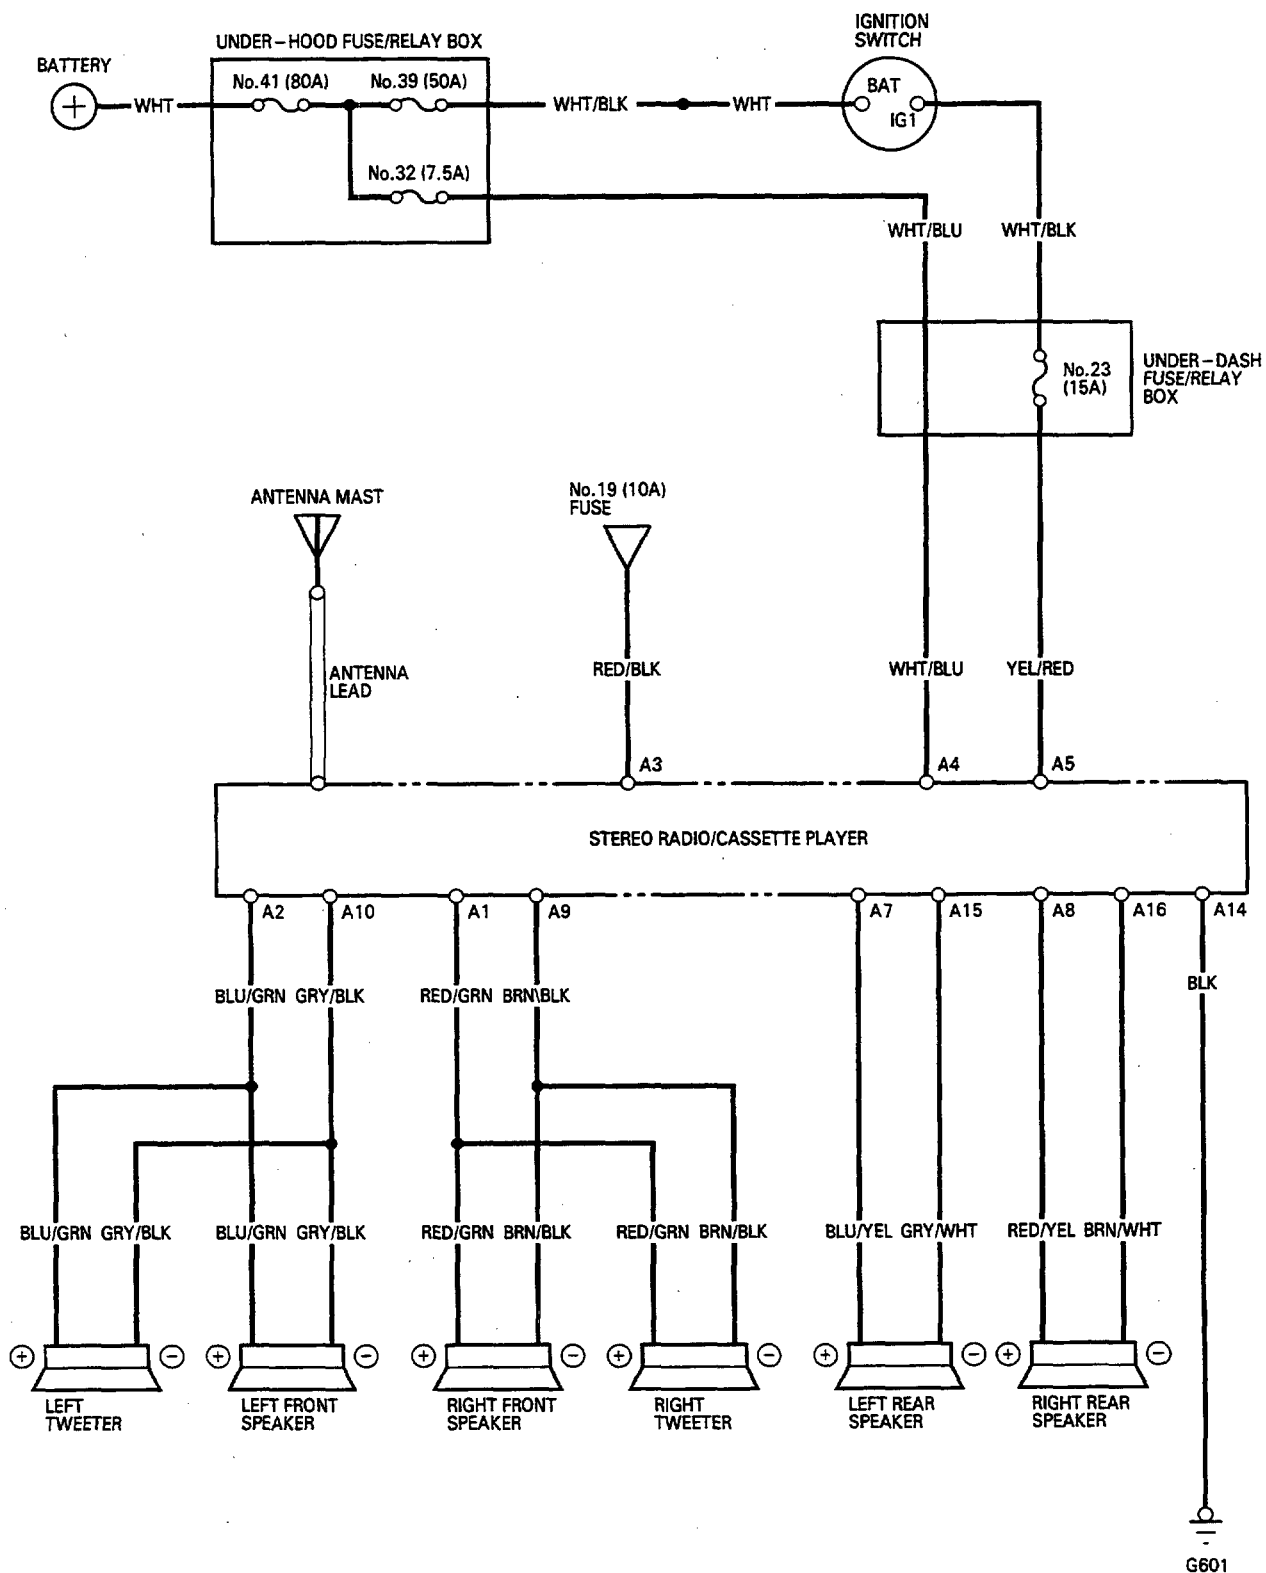



Circuit Diagram (KE model)

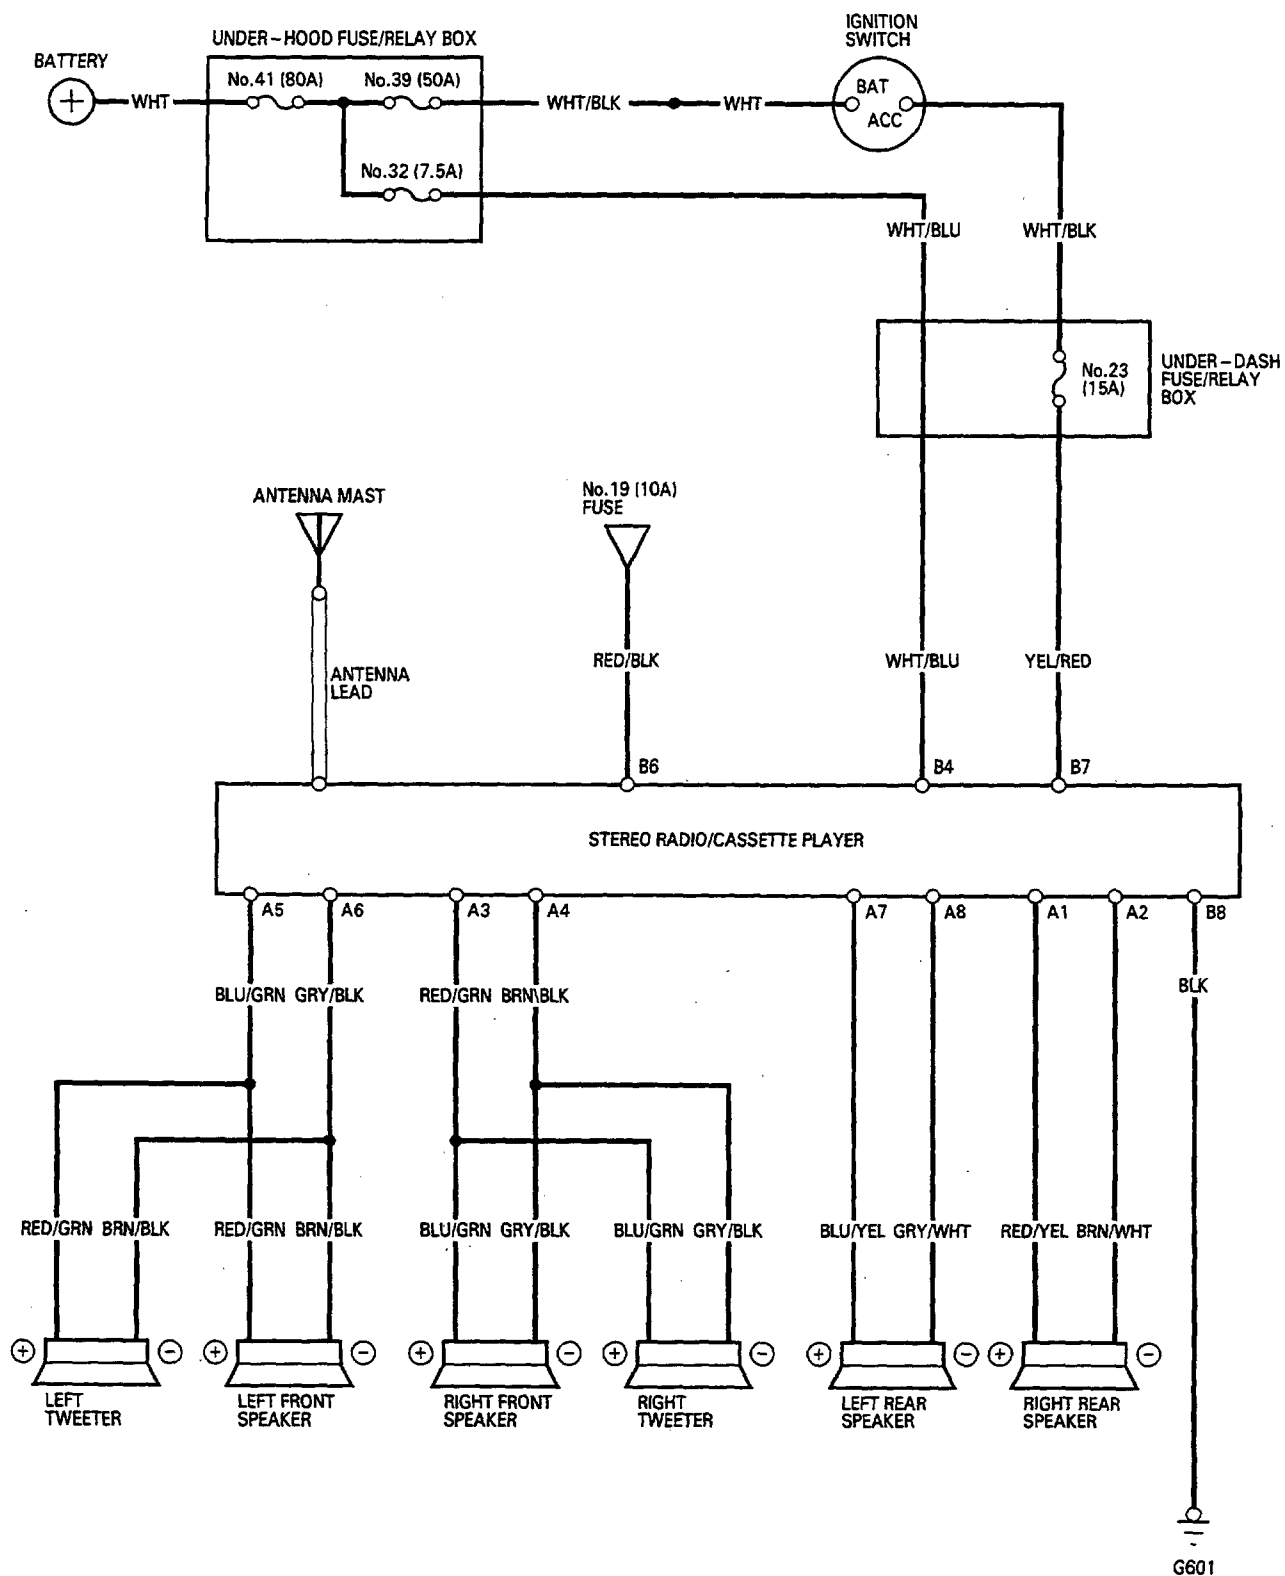


23-A177


Stereo Sound System

Stereo Radio/Cassette Player Removal (KE model)

1. Insert the puller hooks, and pull out the stereo radio/cassette player.

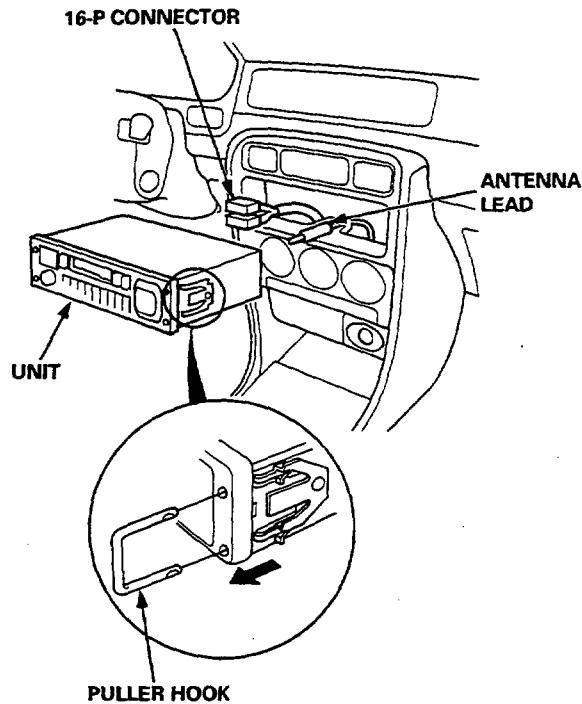

Stereo Radio/Cassette Player Terminals (KE model)

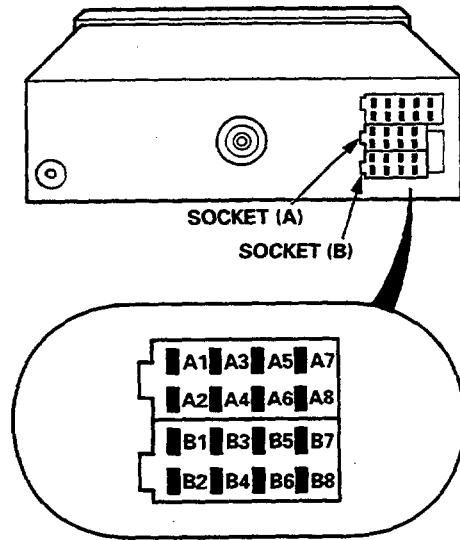


Terminal	Wire	Connects to
B1	—	(not used)
B2	—	(not used)
B3	—	(not used)
B4	WHT/BLU	Constant power (Tuning memory)
B5	—	(not used)
B6	RED/BLK	Lights-on signal
B7	YEL/RED	ACC (Main stereo power supply)
B8	BLK	Ground (G601)
A1	RED/YEL	Right rear speaker ⊕
A2	BRN/WHT	Right rear speaker ⊖
A3	RED/GRN	Right front speaker ⊕
A4	BRN/BLK	Right front speaker ⊖
A5	BLU/GRN	Left front speaker ⊕
A6	GRY/BLK	Left front speaker ⊖
A7	BLU/YEL	Left rear speaker ⊕
A8	GRY/WHT	Left rear speaker ⊖



Antenna Mast Replacement

1. Remove the ceiling light (see page 23-A163).
2. Remove the antenna cap.
3. Remove the four mounting nuts.
4. Remove the antenna mast assembly.

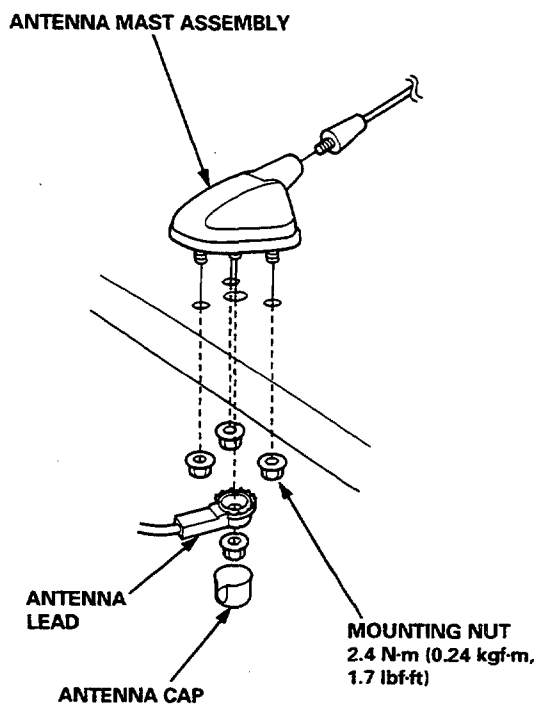


5. Install in the reverse order of removal.

NOTE:

- Inspect the gasket; replace it if it is distorted or stays compressed.
- After installing it, run water over the antenna mast to make sure there is no leak.

Front Speaker Replacement

1. Remove the door panel.
2. Remove the four screws, then disconnect the 2-P connector from the front speaker.

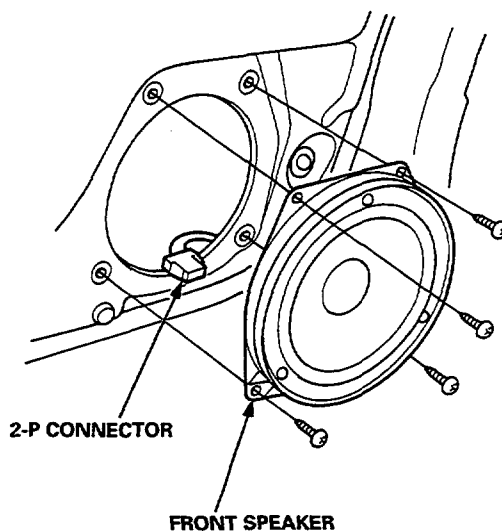


3. Install in the reverse order of removal.


Stereo Sound System

Rear Speaker Replacement

1. Remove the rear side shelf.

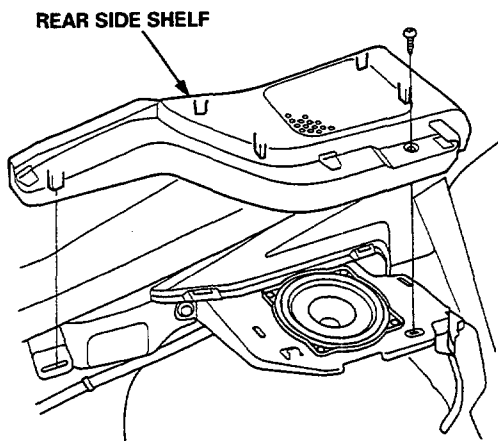


2. Remove the four screws, disconnect the 2-P connector from the rear speaker, and remove the speaker.

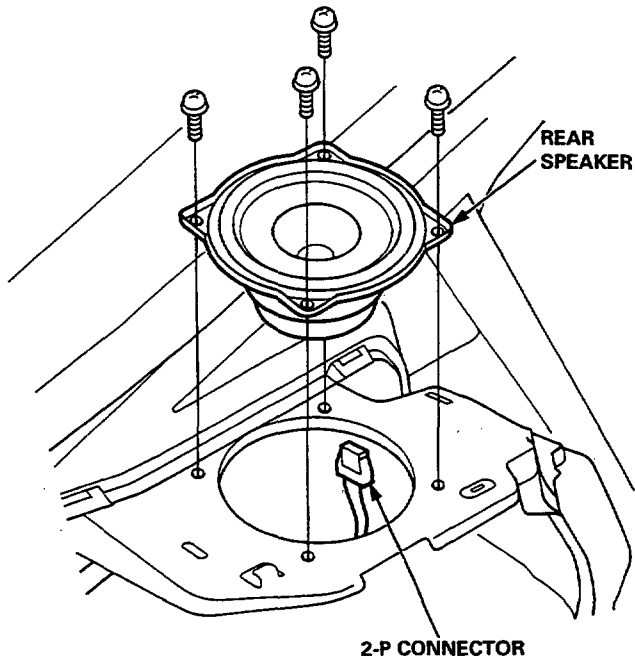

3. Install in the reverse order of removal.

Tweeter Replacement

1. Remove the door panel (see section 20).
2. Disconnect the 2-P connector from the tweeter.
3. Remove the mirror garnish.

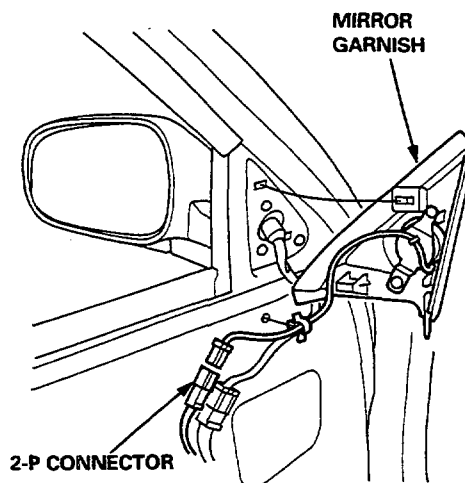

4. Remove the two screws, then remove the tweeter.

