




Installation

1. Install the steering wheel with the front wheels in the straight ahead position.

NOTE: Align the slots on steering wheel and tabs on the turn signal canceling sleeve.


2. Make sure that steering wheel is positioned correctly. Reposition the steering wheel if necessary.

TURN SIGNAL
CANCELING SLEEVE

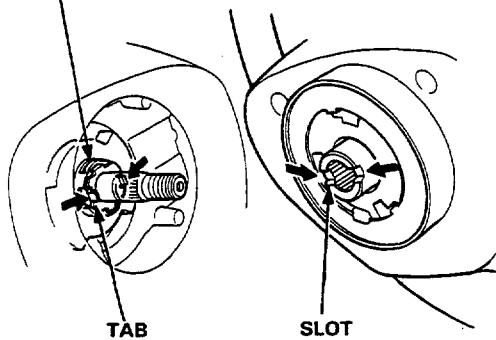

NOTE: If you can not obtained straight ahead position completely, turn the tie-rods equally to adjust the front wheel direction with the steering wheel straight ahead position. Refer to page 18-6 for front toe adjustment.

3. Tighten the new steering wheel nut and install the emblem.

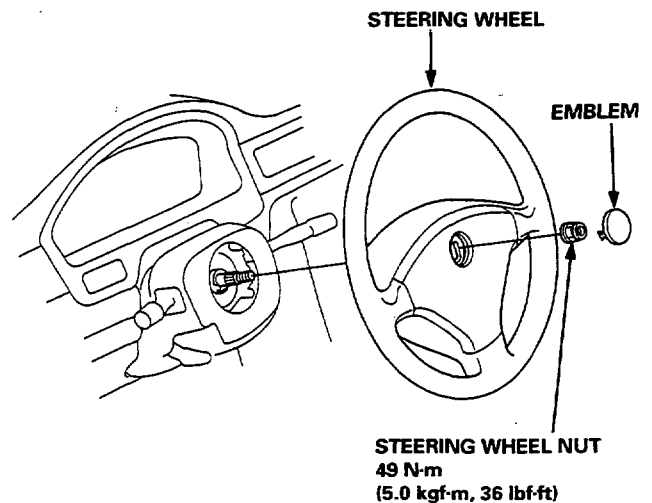

4. After installing the steering wheel, check the horn buttons for proper operation.