


# Trunk Trim

## Replacement

**CAUTION:** Wear gloves to remove and install the panels.

**NOTE:** Take care not to bend or scratch the panels.


1. Remove:
  - Rear shelf and rear side shelf (see page 20-56)
  - Rear door sill molding (see page 20-57)
  - Rear seat-back (see page 20-66)
  - Rear seat side trim (see page 20-57)
2. Remove the trunk mat and spare tire lid.

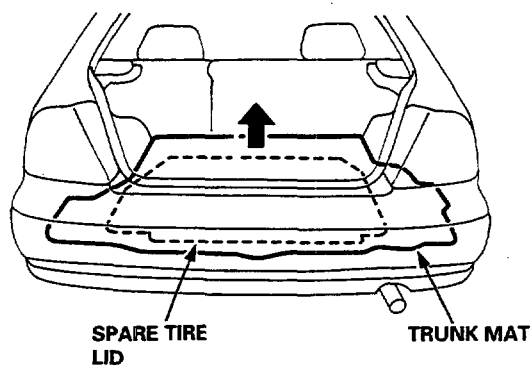



3. Remove the rear trim panel.

▷: Clip locations, 6

- 1) Push the inner clip.  
**NOTE:** Do not push it in too far.

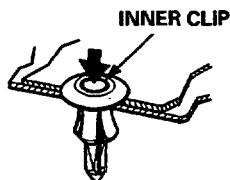

- 2) Detach the clip by pulling it.

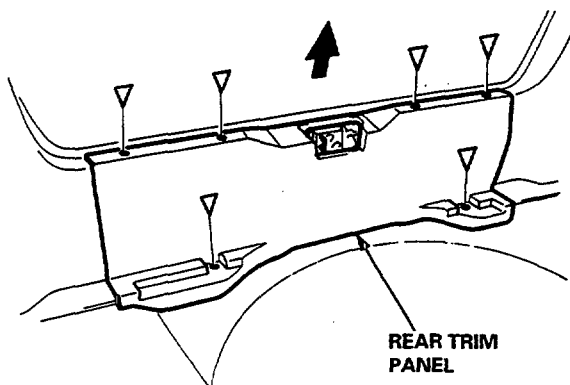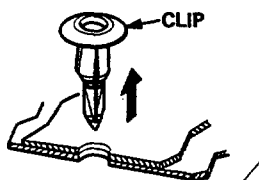



4. Remove the trunk side panel.  
Disconnect the trunk area light connector (left side only).

**NOTE:** A clips on the trunk side panel can be removed in the same way as those on the rear trim panel.

▷: Screw locations, 4  
(Right side only)

A ▷: Clip locations  
Left, 3  
Right, 1

B ▷: Hook locations, 3

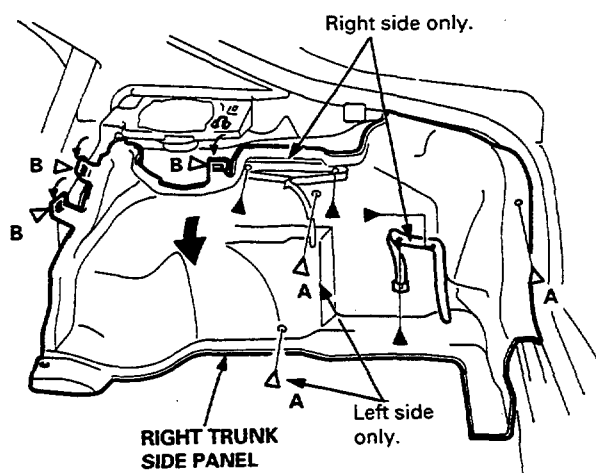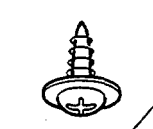


5. Installation is the reverse of the removal procedure.

**NOTE:**

- If necessary, replace any damaged clips.
- When installing the rear trim panel and trunk side panel, install the clips as follows.

- 1) Pull the inner clip up as shown.

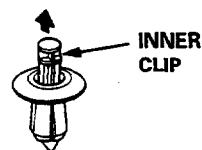

- 2) Install the clip in the rear trim panel, then push the inner clip until it's flush.

