


# License Plate Lights

## Replacement

1. Remove the two screws from the license plate light, and pull the light out part of the way.
2. Disconnect the 2-P connector from the light.
3. Take the lens off, then replace the bulb.

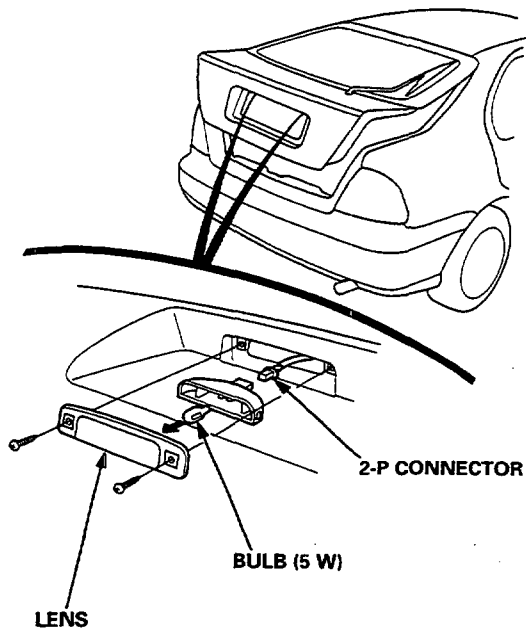

4. Install in the reverse order of removal.

# Glove Box Light

## Test

1. Open the glove box, and disconnect the 2-P connector.

NOTE: If necessary, remove the glove box.

2. Check for continuity between the terminals in each switch position according to the table.

Terminal		
Position	A	B
CLOSE (OFF)		
OPEN (ON)	○	○

