


DRIVE BELT (1CD-FTV) REPLACEMENT


140DE-01

1. REMOVE ENGINE UNDER COVER RH

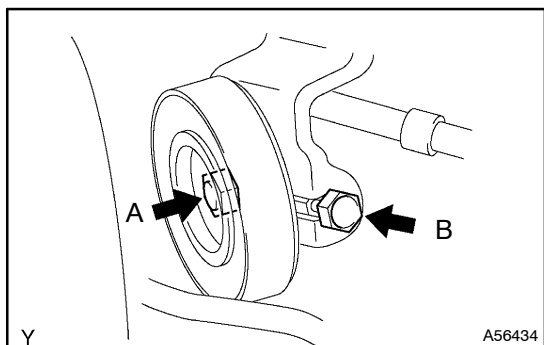


2. REMOVE V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1

- Loosen the nut A and the bolt B.
- Remove the V-ribbed belt.

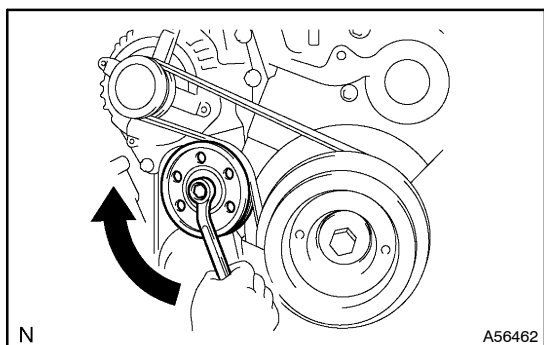

3. REMOVE FAN AND GENERATOR V BELT

- Turn the V-ribbed belt tensioner assembly slowly clockwise, and remove the V-ribbed belt.

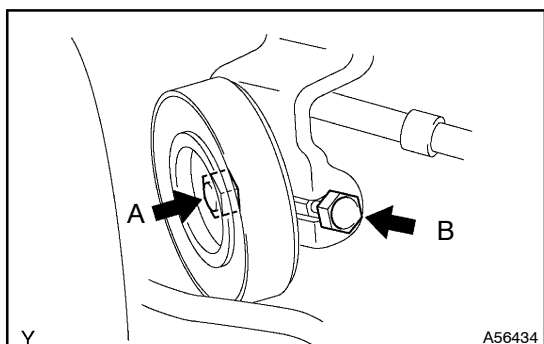

4. ADJUST V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1

- Install the V-ribbed belt.
- Tightening the bolt B, adjust the drive belt tension. (See [page 4-72](#))
- Torque the nut A.

Torque: 43 N·m (439 kgf·cm, 32 ft·lbf)