


INSPECTION

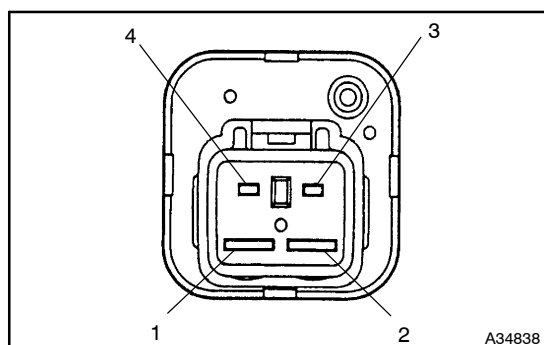

1. GLOW PLUG RELAY ASSY

- (a) Inspect the glow plug relay continuity.
- (1) Using an ohmmeter, check that there is no continuity between terminals 1 and 2.

Specified condition: No continuity

- (2) Check that there is continuity between terminals 3 and 4.

Specified condition: Continuity

- (b) Inspect the glow plug relay operation.
- (1) Apply battery voltage across terminals 3 and 4.
- (2) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

Specified condition: Continuity