


CIGARETTE LIGHTER AND CLOCK

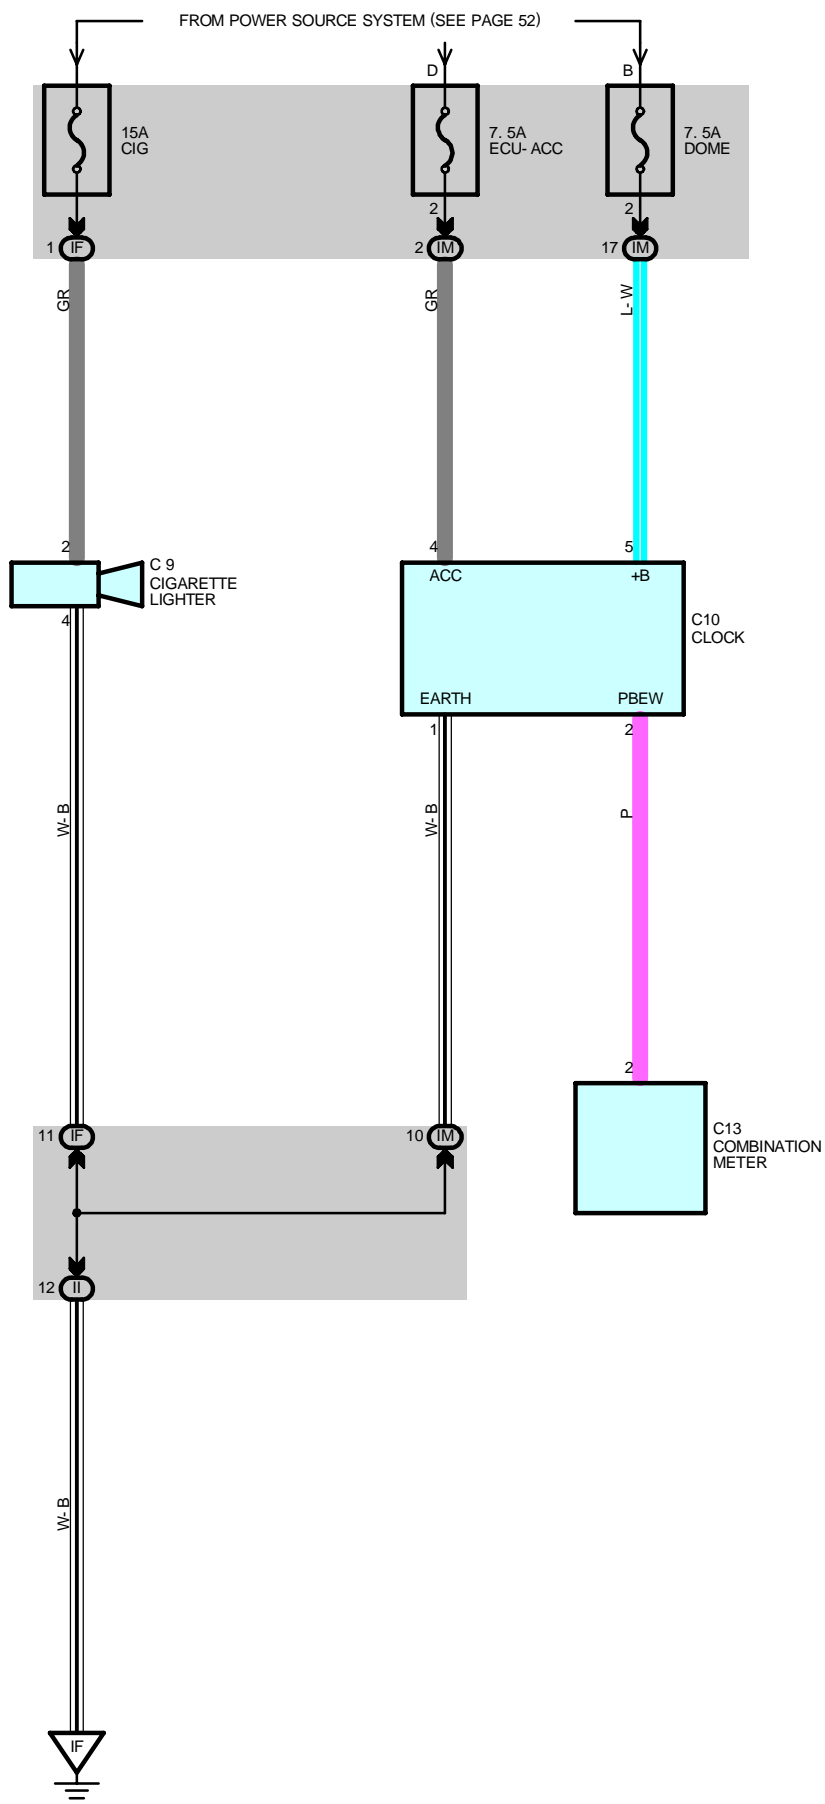

SERVICE HINTS

C9 CIGARETTE LIGHTER

2-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

4-GROUND : Always continuity

C10 CLOCK

5-GROUND : Always **12** volts (Power for clock)

4-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position (Power for indication)

1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C9	36	C10	36	C13	36

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IM		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	44	Instrument Panel Brace RH