

## INSPECTION


### 1. CHECK EVAPORATOR FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

#### NOTICE:


**Never use water to clean the evaporator.**

### 2. CHECK FITTINGS FOR CRACKS OR SCRATCHS

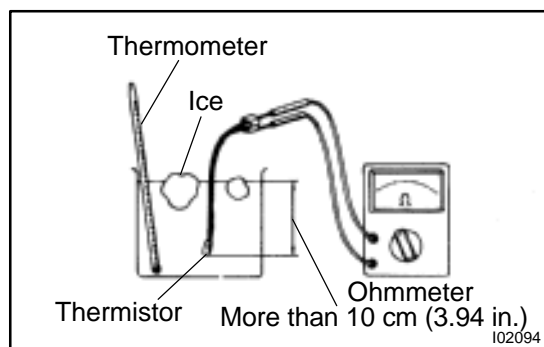

### 3. INSPECT THERMISTOR RESISTANCE

- (a) Place the thermistor in cold water, and while changing the temperature of the water, measure resistance at the connector and at the same time, measure temperature of the water with a thermometer.

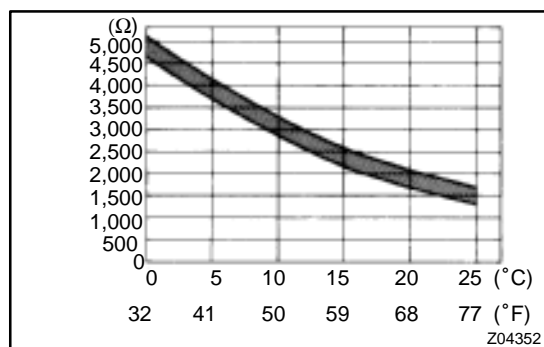

- (b) Compare the 2 readings on the chart.

If resistance value is not as specified, replace the thermistor.