


OPERATION

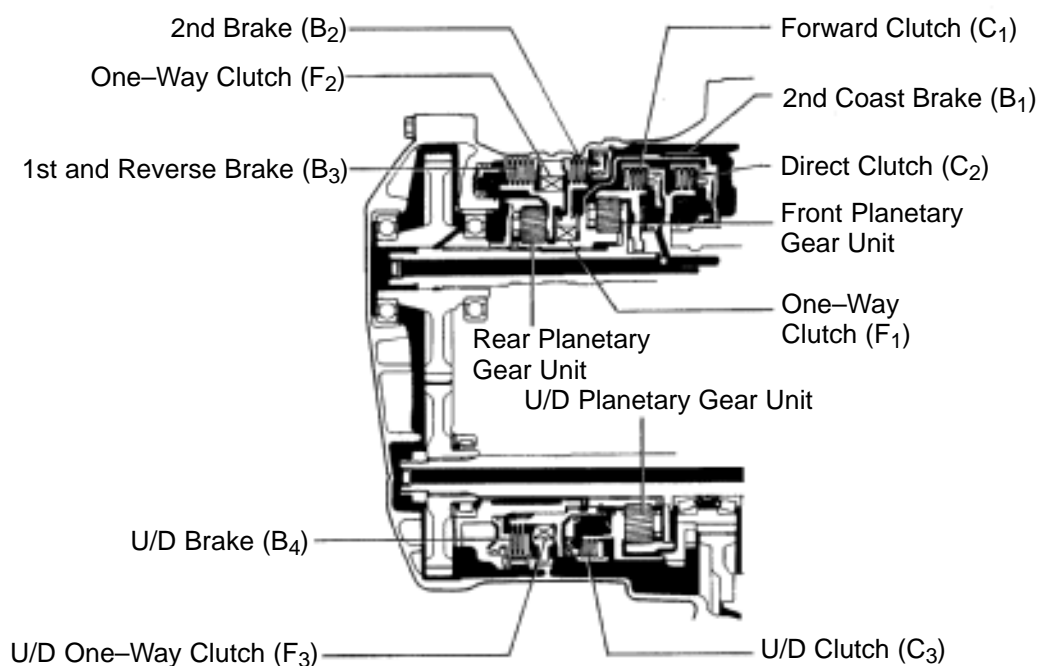

Shift Lever Position	Gear	Shift Solenoid Valve No.1	Shift Solenoid Valve No.2	C ₁	C ₂	C ₃	B ₁	B ₂	B ₃	B ₄	F ₁	F ₂	F ₃
P	Park	ON	OFF							●			
R	Reverse	ON	OFF		●				●	●			
N	Neutral	ON	OFF							●			
D	1st	ON	OFF	●						●		●	●
	2nd	ON	ON	●				●		●	●		●
	3rd	OFF	ON	●	●			●		●			●
	O/D	OFF	OFF	●	●	●		●					
2	1st	ON	OFF	●						●		●	●
	2nd	ON	ON	●			●	●		●	●		●
	3rd*	OFF	ON	●	●			●		●			●
L	1st	ON	OFF	●					●	●		●	●
	2nd*	ON	ON	●			●	●		●	●		●

●: Operating

*: Down-Shift only in the 3rd gear for the 2 position and 2nd gear for the L position no up-shift