





STARTING AND IGNITION

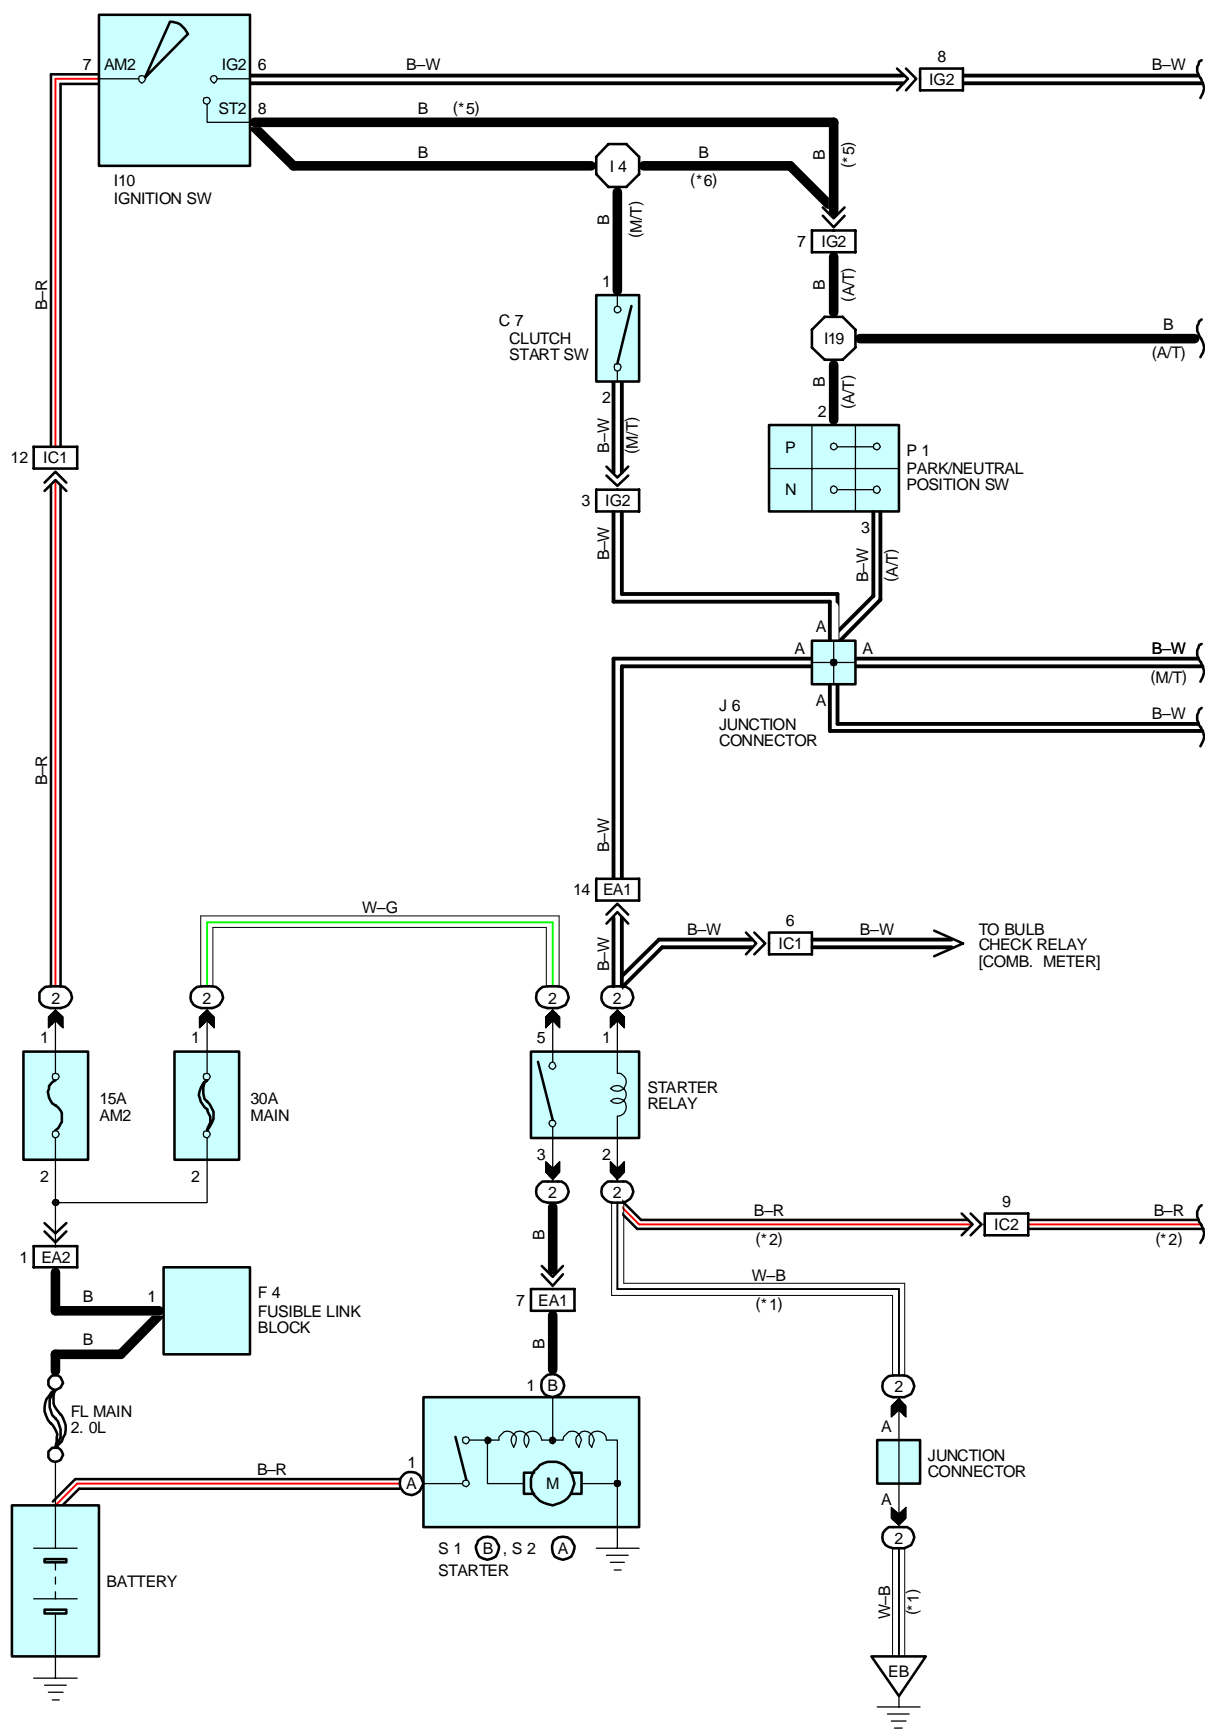

- *1 : W/O THEFT DETERRENT SYSTEM
*2 : W/ THEFT DETERRENT SYSTEM
*3 : W/ DOOR LOCK CONTROL

- *4 : W/O DOOR LOCK CONTROL
*5 : A/T W/ POWER WINDOW
*6 : A/T W/O POWER WINDOW

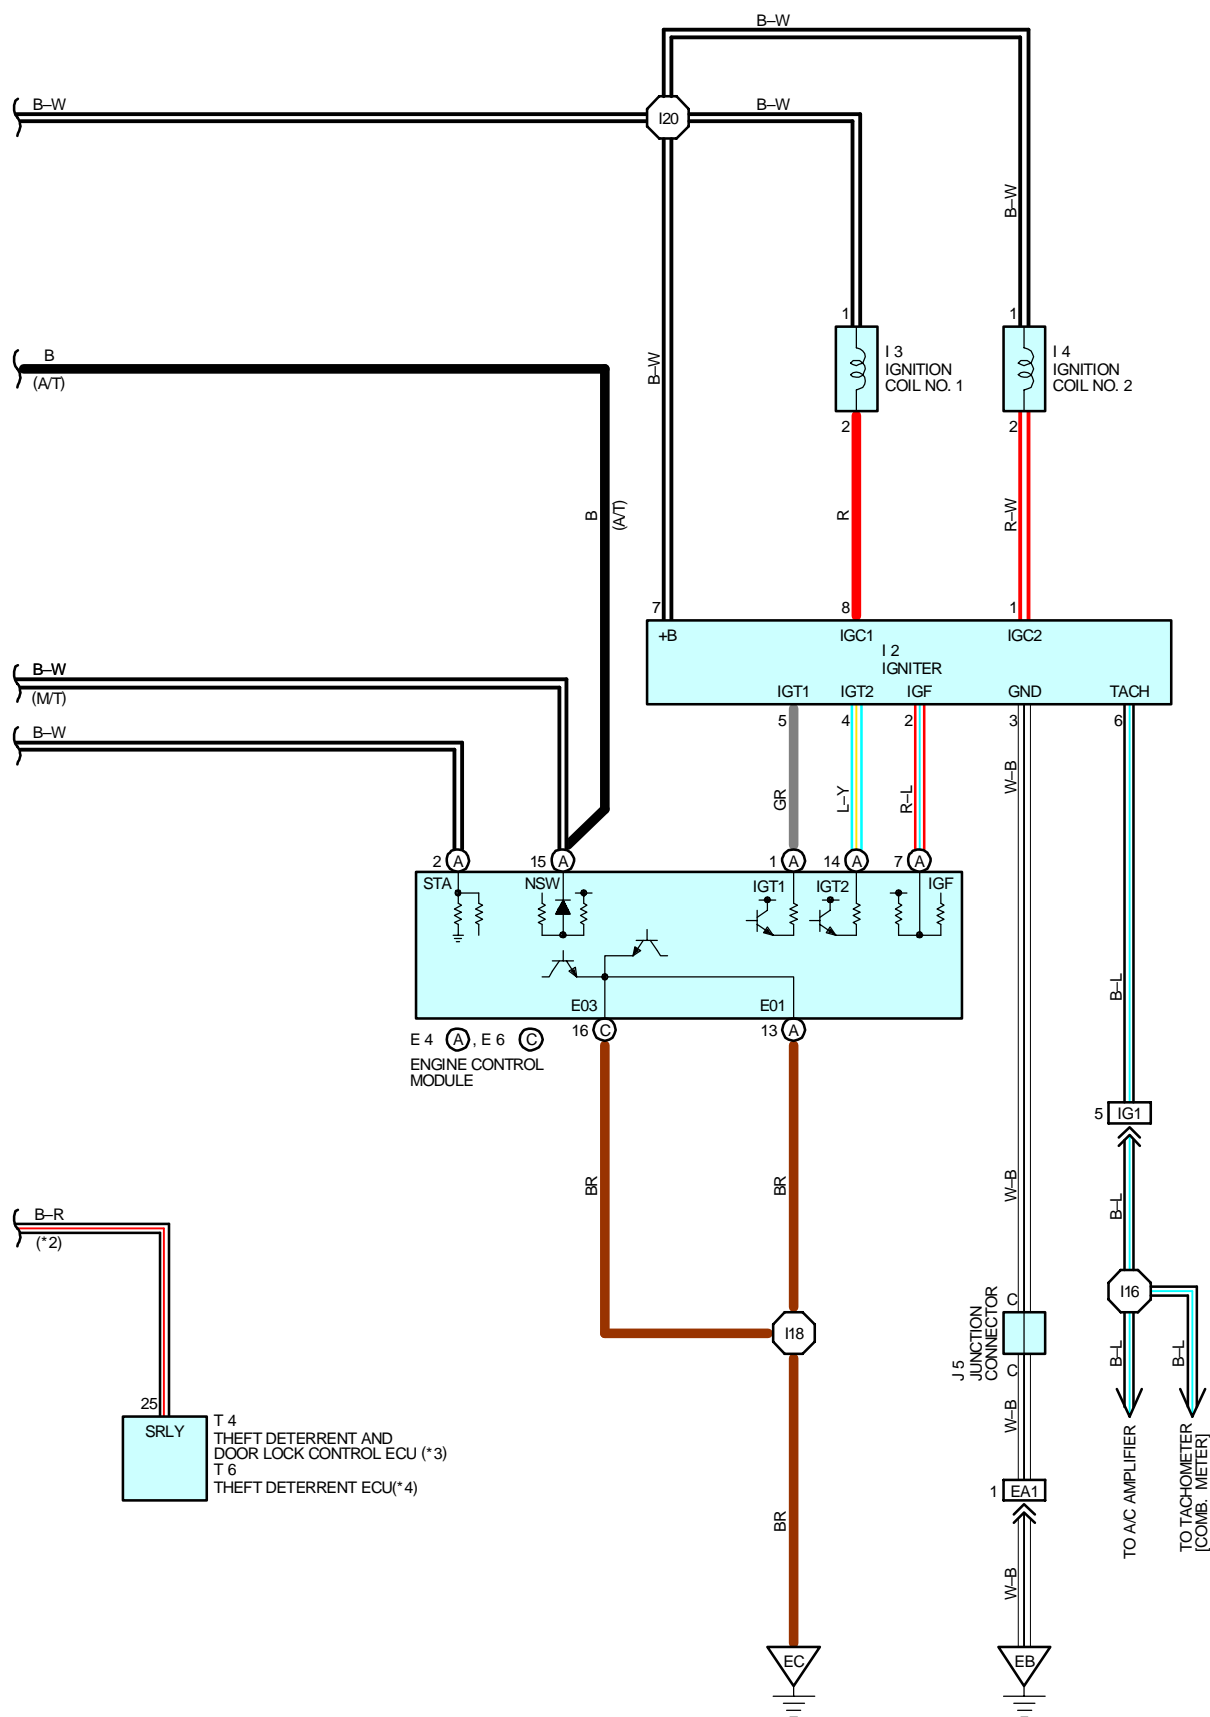



STARTING AND IGNITION

SERVICE HINTS

S1 (B), S2 (A) STARTER

POINTS CLOSED WITH THE PARK/NEUTRAL POSITION SW AT **P** OR **N** POSITION AND THE IGNITION SW AT **ST** POSITION (A/T)

POINTS CLOSED WITH THE CLUTCH START SW **ON** AND THE IGNITION SW AT **ST** POSITION (M/T)

C7 CLUTCH START SW

1-2 : CLOSED WITH THE CLUTCH PEDAL FULLY DEPRESSED

I10 IGNITION SW

7-8 : CLOSED WITH THE IGNITION SW AT **ST** POSITION

7-6 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

P1 PARK/NEUTRAL POSITION SW

2-3 : CLOSED WITH THE SHIFT LEER IN **P** OR **N** POSITION

STARTER RELAY

②5-②3 : CLOSED WITH THE PARK/NEUTRAL POSITION SW AT **P** OR **N** POSITION AND THE IGNITION SW AT **ST** POSITION (A/T)

②5-②3 : CLOSED WITH THE CLUTCH START SW **ON** AND THE IGNITION SW AT **ST** POSITION (M/T)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C7	26	I3	25	P1	25
E4	A 26	I4	25	S1	B 25
E6	C 26	I10	27	S2	A 25
F4	24	J5	27	T4	27
I2	25	J6	27	T6	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
EA2		
IC1	32	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)
IC2	34	
IG1	34	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE BLOWER UNIT)
IG2	34	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	FRONT SIDE OF THE LEFT FENDER
EC	30	RIGHT SIDE OF THE SURGE TANK


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I4	34	INSTRUMENT PANEL WIRE	I19	34	ENGINE WIRE
I16			120		
I18	34	ENGINE WIRE			


C 7




(M/T) E 4 A

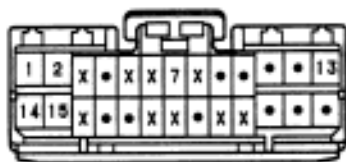


(A/T) E 4 A

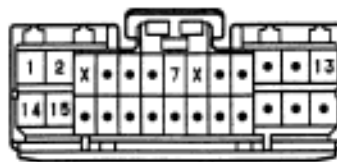


(M/T) E 6 C

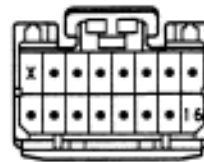


(A/T) E 6 C

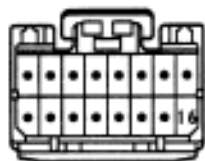

F 4




I 2 BLACK

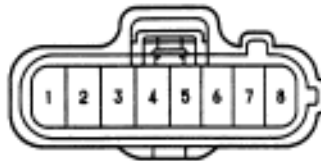

I 3, I 4 BLACK



I 10

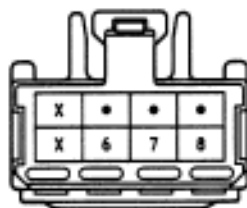

J 5 GRAY



(HINT:SEE PAGE 7)

J 6 GRAY



(HINT:SEE PAGE 7)


P 1 GRAY




S 1 B BLACK



S 2 A



T 4 ORANGE

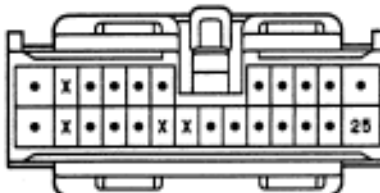

T 6 ORANGE

