



REASSEMBLY

1. COAT PARTS WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN
2. INSERT PISTON WITH SPRING INTO CYLINDER

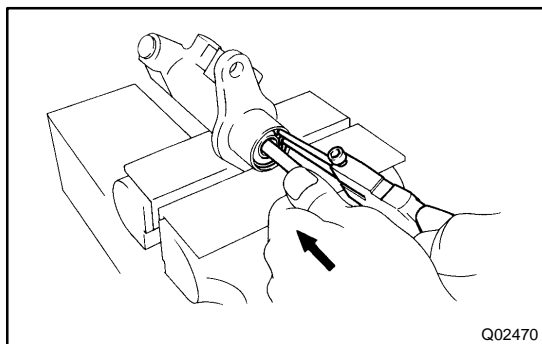

3. **INSTALL PUSH ROD AND BOOT**
 - (a) Install the washer to the push rod.
 - (b) Push the push rod into the piston, and install the snap ring using snap ring pliers.
 - (c) Install the boot.
4. **TEMPORARILY INSTALL LOCK NUT AND CLEVIS**

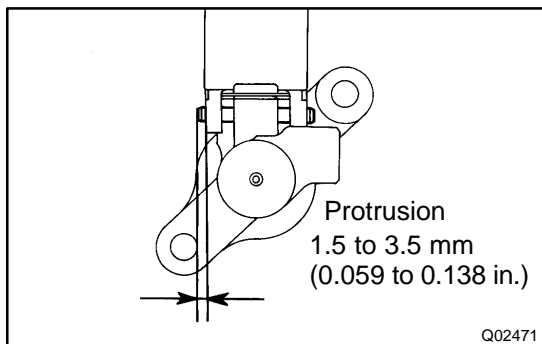

5. **INSTALL RESERVOIR**
 - (a) Install the reservoir and a new grommet.
 - (b) Using a pin punch and hammer, drive in the slotted spring pin.