


## INSTALLATION

### 1. INSTALL THROTTLE BODY

- (a) Install the throttle body with the nut and 3 bolts.  
**Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)**

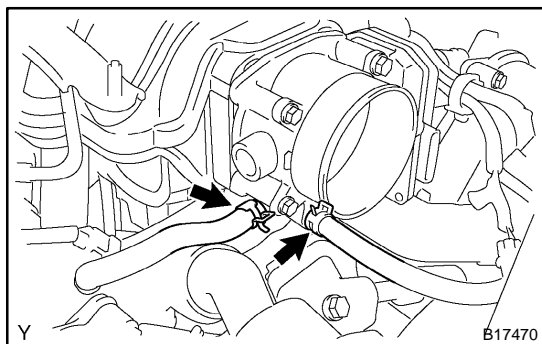

- (b) Connect the 2 water bypass hoses to the throttle body.  
(c) Connect the throttle control connector.
- ### 2. INSTALL INTAKE AIR CONNECTOR
- ### 3. FILL WITH ENGINE COOLANT (See page [CO-2](#))
- ### 4. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS
- ### 5. INSTALL THROTTLE BODY COVER