


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	2 – 3	Continuity
ON	2 – 3 – 4 6 – 7	Continuity
START	1 – 2 – 4 6 – 7 – 8	Continuity


If continuity is not as specified, replace the switch.

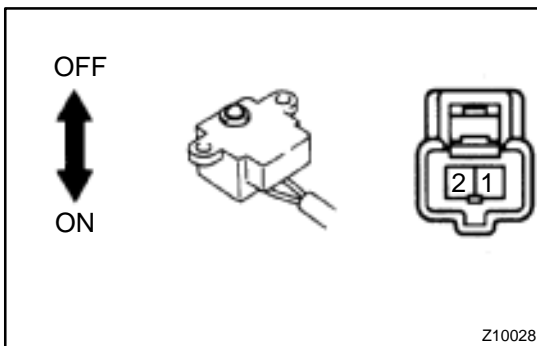

2. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY


Condition	Tester connection	Specified condition
Switch OFF (Key removed)	–	No continuity
Switch ON (Key set)	1 – 2	Continuity

If continuity is not as specified, replace the switch.

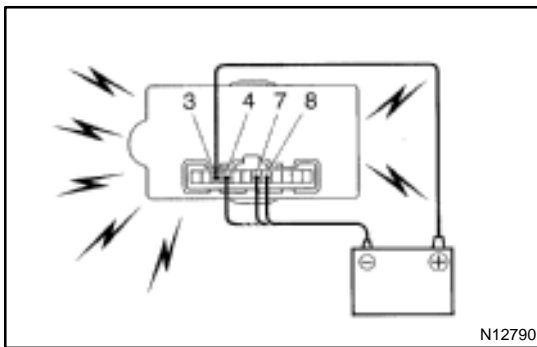


3. INSPECT INTEGRATION RELAY OPERATION


- Connect the positive (+) lead from the battery to terminal 3.
- Connect the negative (-) lead from the battery to terminal 4 and 8.
- Check the chime sounds.

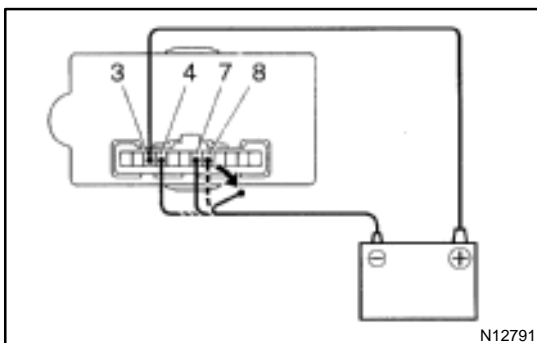

- Disconnect the negative (-) lead from the battery to terminal 8.
- Check that the chime stops sounding.

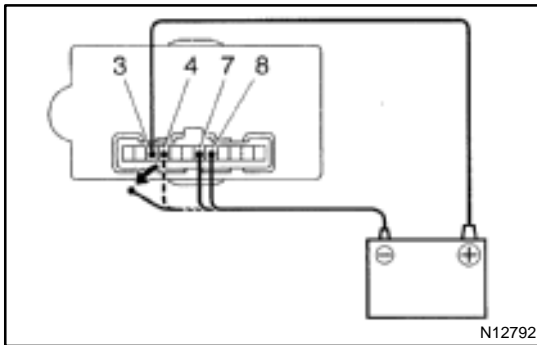

- (f) Connect the negative (–) lead from the battery to terminal 8.
 - (g) Disconnect the negative (–) lead from the battery to terminal 4.
 - (h) Check that the chime stops sounding.
- If operation is not as specified, replace the relay.

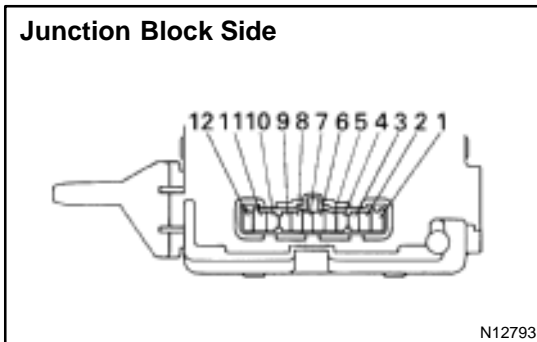

4. INSPECT INTEGRATION RELAY CIRCUIT

Remove the relay from the instrument panel junction block and inspect the connectors on the junction block side.

Tester connection	Condition	Specified condition
4 – Ground	Key unlock warning switch OFF	No continuity
4 – Ground	Key unlock warning switch ON	Continuity
8 – Ground	Driver's door courtesy switch OFF	No continuity
8 – Ground	Driver's door courtesy switch ON	Continuity
11 – Ground	Light control switch OFF	No continuity
11 – Ground	Light control switch TAIL or HEAD	Continuity
3 – Ground	Constant	Battery positive voltage
9 – Ground	Ignition switch LOCK or ACC	No voltage
9 – Ground	Ignition switch ON	Battery positive voltage
12 – Ground	Constant	Battery positive voltage

If the circuit is as specified, try replacing the relay with a new one.

If the circuit is not as specified, inspect the circuits connected to other parts.