

DTC	13, 14	ABS Control (Motor) Relay Circuit
-----	--------	-----------------------------------

CIRCUIT DESCRIPTION

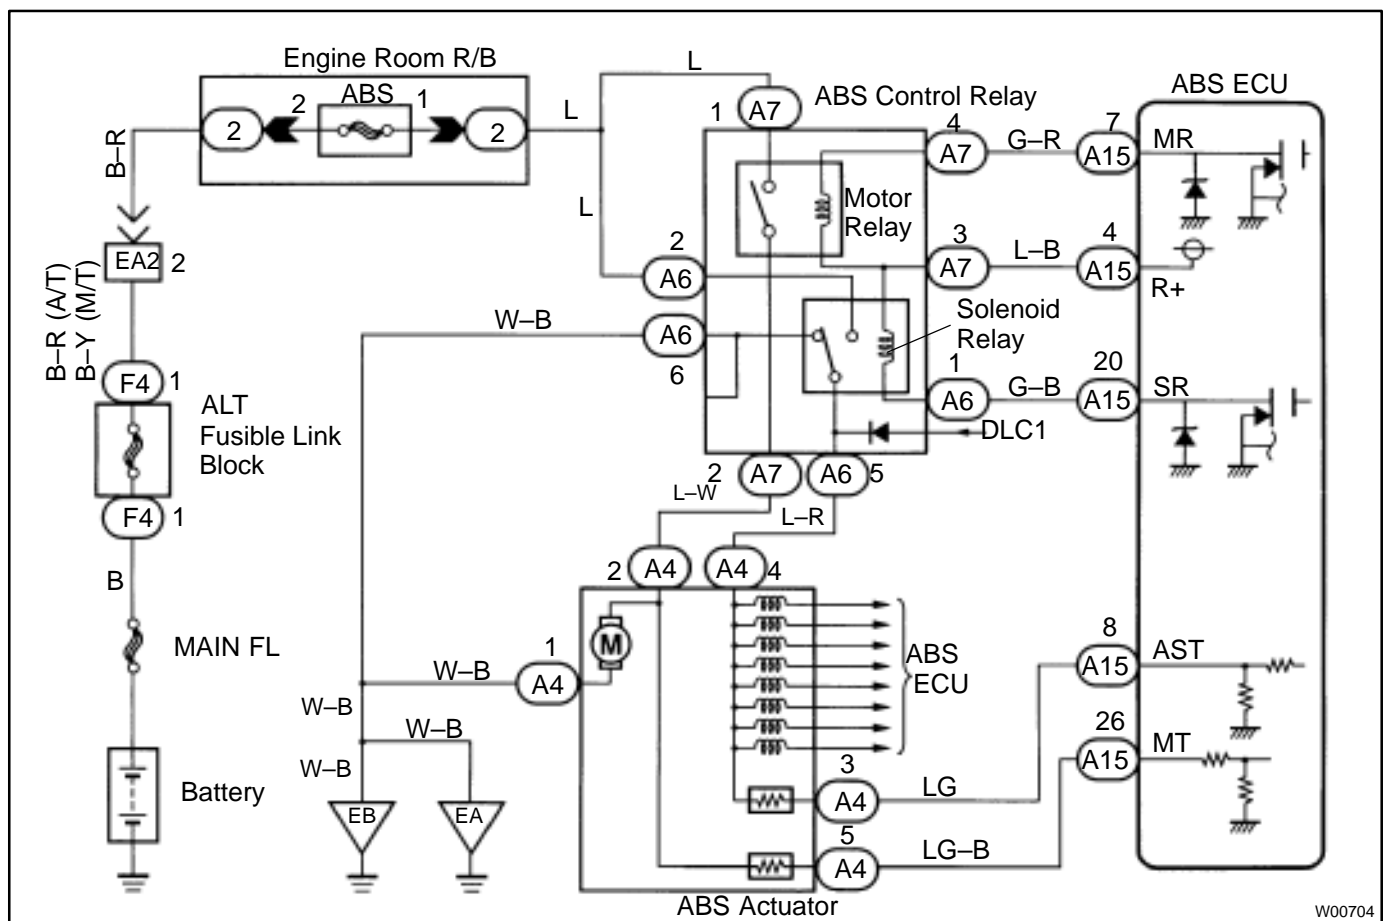
The ABS control (motor) relay supplies power to the ABS pump motor. While the ABS is activated, the ECU switches the ABS control (motor) relay on and operates the ABS pump motor.

DTC No.	DTC Detecting Condition	Trouble Area
13	Conditions (1) and (2) continue for 0.2 sec. or more: (1) ABS control (motor) relay terminal (MR) voltage: Battery positive voltage (2) ABS control (motor) relay monitor terminal (MT) voltage: 0 V	<ul style="list-style-type: none"> • ABS control (motor) relay • Open or short in ABS control (motor) relay circuit
14	Conditions (1) and (2) continued for 4 sec. or more: (1) ABS control (motor) relay terminal (MR) voltage: 0 V (2) ABS control (motor) relay monitor terminal (MT) voltage: Battery positive voltage	<ul style="list-style-type: none"> • ABS control (motor) relay • B+ short in ABS control (motor) relay circuit

Fail safe function:

If trouble occurs in the ABS control (motor) relay circuit, the ECU cuts off the current to the ABS control (solenoid) relay and prohibits ABS control.

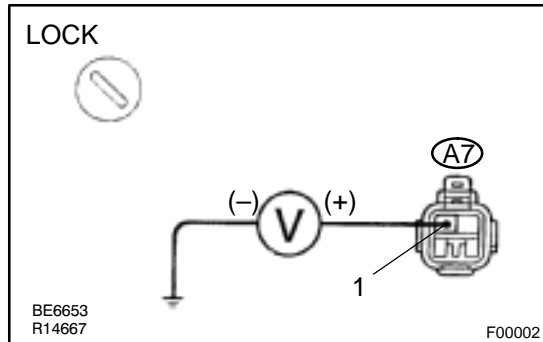
WIRING DIAGRAM



W00704

INSPECTION PROCEDURE

- 1 Check voltage between terminals A7 – 1 of ABS control relay and body ground.**

**PREPARATION:**

Disconnect the ABS control relay connector.

CHECK:

Measure voltage between terminal A7 – 1 of ABS control relay harness side connector and body ground.

OK:

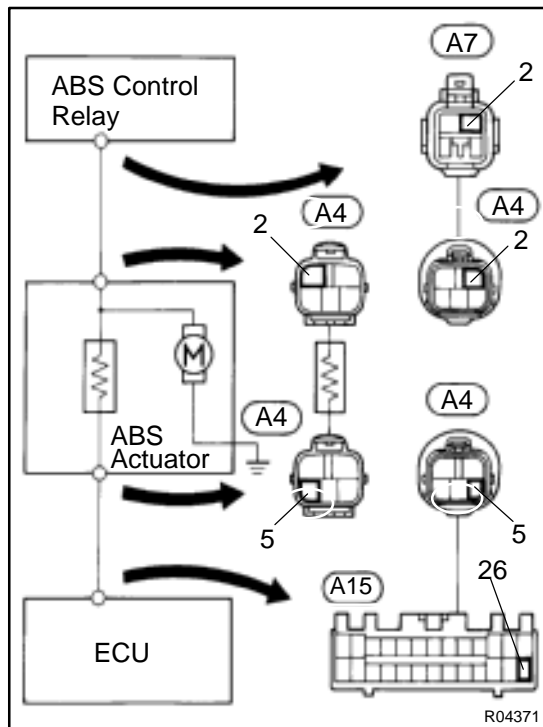
Voltage: 10 – 14 V

NG

Check and repair harness or connector.

OK

- 2 Check continuity between terminals A7 – 2 and A4 – 2, A4 – 2 and A4 – 5, A4 – 5 and A15 – 26.**

**PREPARATION:**

Disconnect the connector from ABS actuator.

CHECK:

Check continuity between terminals A7 – 2 and A4 – 2, A4 – 2 and A4 – 5, A4 – 5 and A15 – 26.

OK:

Continuity

HINT:

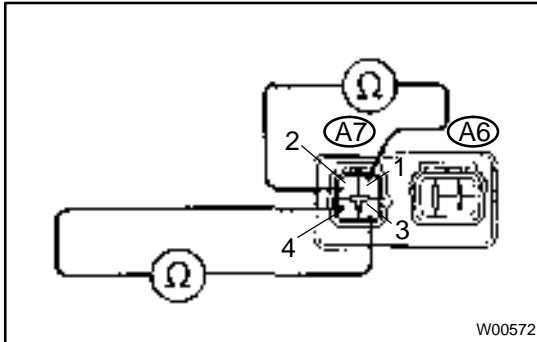
There is a resistance of 32 – 34 Ω between terminals A4 – 2 and A4 – 5.

NG

Repair or replace harness or ABS actuator.

OK

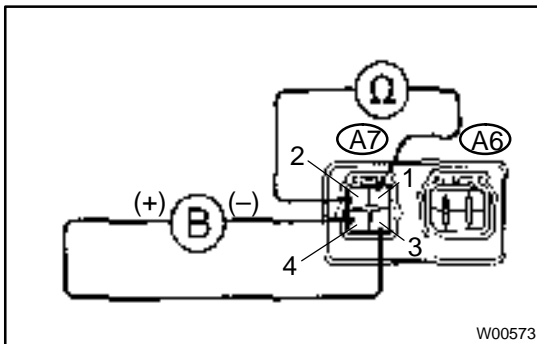
3 Check ABS control (motor) relay.

**CHECK:**

Check continuity between each terminal of ABS control (motor) relay.

OK:

Terminals A7 – 3 and A7 – 4	Continuity (Reference value 62 Ω)
Terminals A7 – 1 and A7 – 2	Open

**CHECK:**

- Apply battery voltage between terminals A7 – 3 and A7 – 4.
- Check continuity between terminals of ABS control (motor) relay.

OK:

Terminals A7 – 1 and A7 – 2	Continuity
-----------------------------	------------

NG**Replace ABS control relay.****OK**

4 Check for open and short in harness and connector between ABS control relay and ABS ECU (See page [IN-27](#)).

NG**Repair or replace harness or connector.****OK**

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.