


## INSPECTION

### 1. CLEAN THROTTLE BODY

- Wash and clean the cast part with a soft brush and carburetor cleaner.
- Using compressed air, blow all passages and apertures in the throttle body.


#### NOTICE:

To prevent deterioration, do not clean the throttle position sensor.

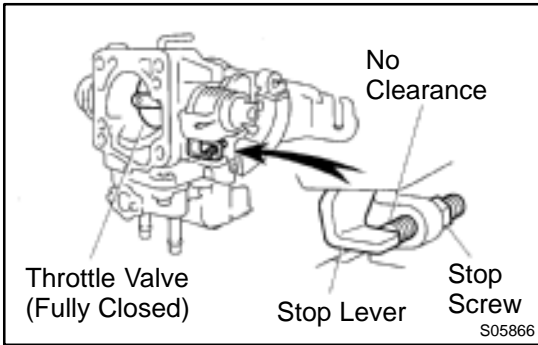

### 2. INSPECT THROTTLE VALVE

Check that there is no clearance between the throttle stop screw and throttle lever when the throttle valve is fully closed.

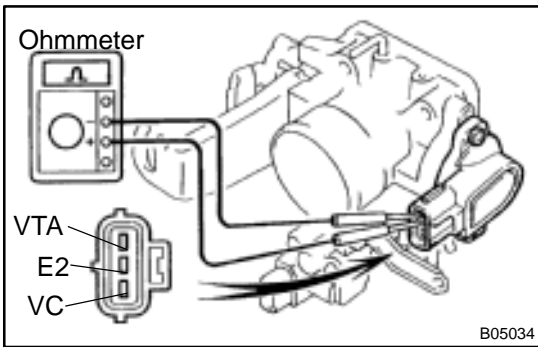

### 3. INSPECT THROTTLE POSITION SENSOR

Using an ohmmeter, measure the resistance between each terminal.

Throttle valve condition	Between terminals	Resistance
Fully closed	VTA – E2	0.2 – 5.7 kΩ
Fully open	VTA – E2	2.0 – 10.2 kΩ
–	VC – E2	2.5 – 5.9 kΩ