

DTC	P0724	BRAKE SWITCH "B" CIRCUIT HIGH
-----	-------	-------------------------------

CIRCUIT DESCRIPTION

The purpose of this circuit is to prevent the engine from stalling while driving in lock-up condition, when brakes are suddenly applied.

When the brake pedal is depressed, this switch sends a signal to the ECM. Then the ECM cancels the operation of the lock-up clutch while braking is in progress.

DTC No.	DTC Detecting Condition	Trouble Area
P0724	The stop light switch remains ON even when the vehicle is driven in a GO (30 km/h) and STOP (3 km/h) fashion 10 times. (2-trip detection logic).	<ul style="list-style-type: none"> • Short in stop light switch signal circuit • Stop light switch • ECM

MONITOR DESCRIPTION

This DTC indicates that the stop light switch remains on. When the stop light switch remains ON during "stop and go" driving, the ECM interprets this as a fault in the stop light switch and the MIL comes on and the ECM stores the DTC. The vehicle must stop (less than 3 km/h (2 mph)) and go (30 km/h (19 mph) or more) ten times for two driving cycles in order to detect malfunction.

WIRING DIAGRAM

1AZ-FE: [See page 05-149.](#)

2AZ-FE: [See page 05-362.](#)

INSPECTION PROCEDURE

HINT:

Using the Intelligent Tester II Data List allows switch, sensor, actuator and other item values to be read without removing any parts. Reading the Data List early in troubleshooting is one way to shorten labor time.


NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

- Warm up the engine.
- Turn the ignition switch off.
- Connect the Intelligent Tester II to the DLC3.
- Turn the ignition switch to the ON position.
- Turn on the tester.
- Select the item "Enter / Diagnosis / OBD-MOBD / Power train / Engine and ECT / Data List".
- Follow the instructions on the tester and read the Data List.

Item	Measurement Item/ Range (display)	Normal Condition
Stop Light Switch	Stop light SW Status/ ON or OFF	<ul style="list-style-type: none"> • Brake Pedal is depressed: ON • Brake Pedal is released: OFF

1 INSPECT STOP LAMP SWITCH ASSY

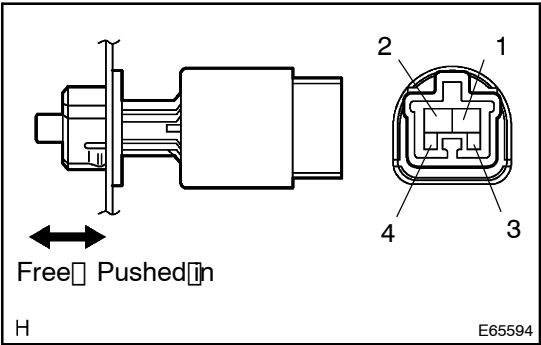


- (a) Remove the stop lamp switch assy.
(b) Measure the resistance according to the value(s) in the table below.
Standard:

Switch position	Tester Connection	Specified Condition
Switch pin free	1 – 2	Below 1 Ω
Switch pin pushed in	↑	10 kΩ or higher
Switch pin free	3 – 4	10 kΩ or higher
Switch pin pushed in	↑	Below 1 Ω

NG → REPLACE STOP LAMP SWITCH ASSY

OK

2 CHECK HARNESS AND CONNECTOR (STOP LAMP SWITCH ASSY – ECM)

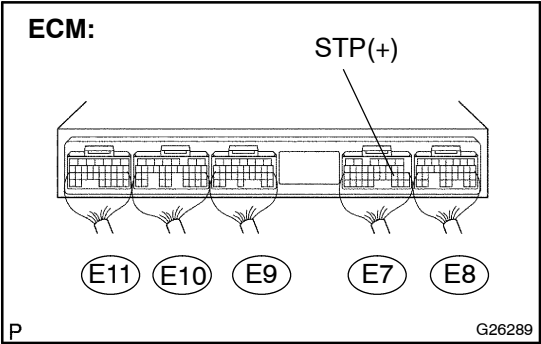

- (a) Install the stop lamp switch assy.
(b) Measure the voltage according to the value(s) in the table below when the brake pedal is depressed and released.
Standard:

Condition	Tester Connection	Specified Condition
Brake pedal is depressed	E7 – 19 (STP) – Body ground	10 to 14 V
Brake pedal is released	↑	Below 1 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR (SEE PAGE 01-32)

OK

REPLACE ECM (SEE PAGE 10-30)