



INSPECTION

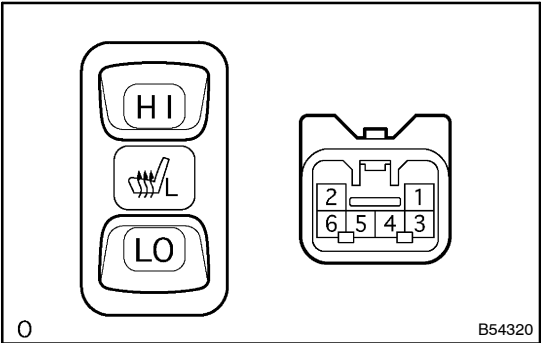

1. INSPECT SEAT HEATER SWITCH


(a) Inspect seat the heater switch LH continuity.

Condition	Tester connection	Specified condition
HI	3 ⇔ 4	Continuity
	5 ⇔ 6	
OFF	-	No Continuity
LO	4 ⇔ 5	Continuity
Illumination	1 ⇔ 2	Continuity

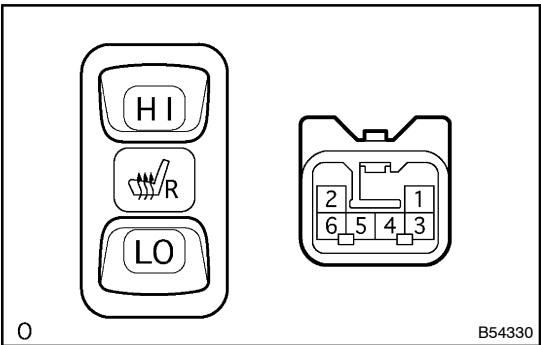

(b) Inspect the seat heater switch RH continuity.


Condition	Tester connection	Specified condition
HI	3 ⇔ 4	Continuity
	5 ⇔ 6	
OFF	-	No Continuity
LO	4 ⇔ 5	Continuity
Illumination	1 ⇔ 2	Continuity

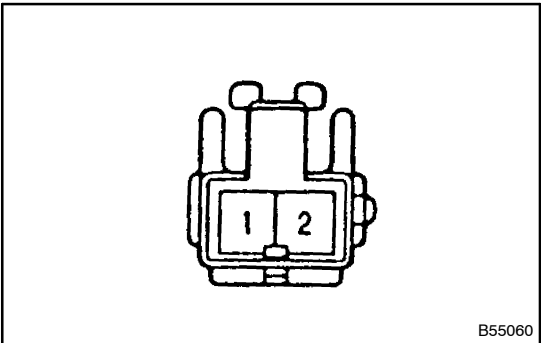

2. INSPECT SEAT HEATER LH

(a) Inspect the seat back heater assembly LH continuity.


Condition	Tester connection	Specified condition
Constant	1 ⇔ 2	Continuity

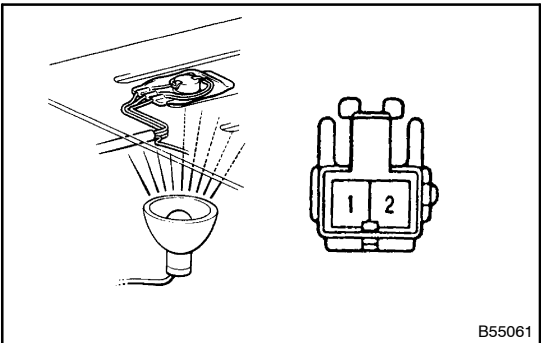

(b) Inspect the seat back thermostat conyinuity.


- (1) Heat the thermostat with a light.
- (2) Inspect the seat back heater continuity between terminals as shown.

Tester connection	Condition (seat heater temp)	Specified condition
1 ⇔ 2	28°C (82°F) Seat Back Cover Side	Continuity

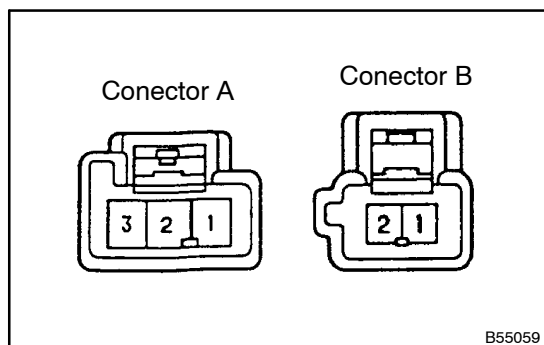

(c) Inspect the seat cushion heater assembly LH continuity.

Tester connection	Condition	Specified condition
A1 \Leftrightarrow A3	Seat heater temp. below 28°C (78°F)	Continuity
A1 \Leftrightarrow B1	Seat heater temp. below 28°C (78°F)	Continuity
A2 \Leftrightarrow B2	Constant	Continuity
A3 \Leftrightarrow B1	Constant	Continuity

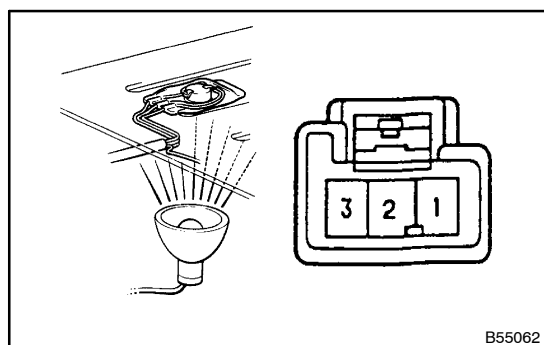

(d) Inspect the seat cushion thermostat continuity.

- (1) Heat the thermostat with a light.
- (2) Inspect the seat cushion heater continuity between terminals as shown.

Tester connection	Condition (seat heater temp)	Specified condition
1 \Leftrightarrow 3	30°C (86°F) Seat cushion cover side	Continuity

3. INSPECT SEAT HEATER RH